



SERVICE MANUAL

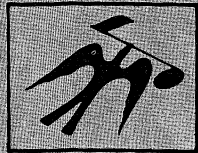

FISHER

RS-1035L

Stereo Receiver
(EUROPE)

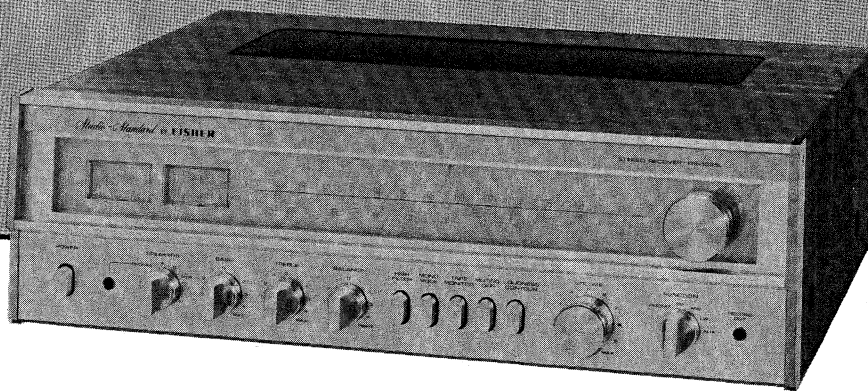

The first name in high fidelity

TABLE OF CONTENTS

Specifications	3
Recommended Test Equipment	4
Disassembly Instructions.	5
Exploded View of Cabinet and Chassis Front Mounted Assemblies	6
Exploded View of Chassis and Rear Mounted Assemblies	7
Parts List	8
Functional Block Diagram.	9
Dial Cord Stringing	9
AF-FM Multiplex Alignment	10
Alignment Wave Forms.	11
AM-FM RF/IF MPX Board Layout	11
RF, IF MPX, P.C.B. Assy Parts List.	12
AM-FM RF/IF MPX P.C. Board	13,14
FM IF IC LA1230 Signal Flow.	13
FM MPX IC LA3350 Signal Flow.	13,14
AM RF IF IC HA1151 Signal Flow.	14
LW/MW Converter P.C. Board	15
EQ P.C. Board	15
Boostor P.C. Board	16
Tone Control and Mode Selector P.C. Board.	15,16
Power Amp P.C. Board.	17,18
Power Supply P.C. Board	17
Dial Lamp P.C. Board.	18
EQ, Tone, Boostor, P.C.B. Assy Parts List	19
Power Amp, Power Supply, Dial Lamp, P.C.B. Assy Parts List	20
LW/MW Conv. P.C.B. Assy Parts List.	20
Power Amp IC STK-082 Schematic.	20
Point to Point Wiring Diagram Top View	21,22
Point to Point Wiring Diagram Bottom View.	23,24
Schematic Diagram	25,26

EXPLANATION OF PROTECTIVE CIRCUITS

* For about two seconds after the power switch is turned on, the speakers remain silent because the power muting circuit operates during this time.

If this unit is operated with speakers of 4 ohm or less, or by being operated to drive two pairs of speakers of 8 ohm or less simultaneously, its power limiter will start to operate. If under these conditions the volume is raised to a high level, the sound from the speakers may be distorted.

* If the speaker terminals are short-circuited or the ventilation holes at the cabinet top are blocked during long periods of operation. The internal temperature may rise abnormally. At about 90°, the thermal sensor (temperature detection) circuit becomes activated and will interrupt the signal. If the cause is removed and the internal temperature is back to normal, the unit automatically resets itself to restore normal operation.

Nominal Specifications For Information Only.

RECEIVER		RS-1035L
POWER AMPLIFIER SECTION Continuous RMS sine wave power per channel within stated bandwidth at no more than stated distortion and with an 8 ohm load.		35W x 2
Power Bandwidth		20Hz/20kHz
Total Harmonic Distortion		0.2 %
PREAMPLIFIER SECTION Input Sensitivity and Impedance At rated output, 8-ohms at 1kHz		
Phono		2mV/50k ohm
Phono (max input capability)		110mV
Auxiliary		150mV/100k ohm
Tape Monitor		150mV/100k ohm
Hum & Noise (below rated output)		
Phono		75 dB
Auxiliary		90 dB
Tape Monitor		90 dB
Frequency Response		
Phono (RIAA EQUALIZED ± 1 dB)		30Hz - 15kHz
Auxiliary input ± 1 dB		20Hz - 20kHz
Tape Monitor input ± 1 dB		20Hz - 20kHz
Bass Control Range (at 100Hz)		± 10 dB
Treble Control Range (at 10kHz)		± 10 dB
Loudness Contour (at 30 dB volume attenuation)		+8 dB at 100Hz
		+4 dB at 10kHz
High Filter		-6 dB (5kHz)
Separation (stereo) at 1kHz		40 dB
FM TUNER SECTION		
Usable Sensitivity	Mono	1.9 μ V/10.8 dBf
	Stereo	4.6 μ V/18.5 dBf
50 dB Quieting Sensitivity	Mono	2.8 μ V/14.2 dBf
	Stereo	38 μ V/36.8 dBf
Capture Ratio		1.0 dB
Alt Channel Selectivity (± 400 kHz)		68 dB
Image Response Ratio		56 dB
Spurious Response Ratio		85 dB
AM Suppression Ratio		55 dB
Signal-to-Noise Ratio (Mono & Stereo)		70/66 dB
Total Harm. Distortion (Mono & Stereo) at 65 dBf		0.3/0.4 %
T.H.D. at 50 dB Quieting Sensitivity	Mono	0.4 %
	Stereo	0.5 %
Stereo Separation (1kHz/10kHz)		40/30 dB
Sub-Carrier Suppression (19/38kHz)		60/70 dB
AM TUNER SECTION		
Usable Sensitivity	MW	300 μ V/m
	LW	500 μ V/m
Selectivity (± 10 kHz)		43 dB
Signal-to-Noise Ratio		48 dB
Image Response Ratio		48 dB
IF Response Ratio		45 dB
GENERAL SECTION		
Power Requirements (50/60Hz)		AC110V/220V
Power Consumption		190 W/228 VA
AC Outlets		
Dimensions H x W x D		46.8 x 15.4 x 33.3 cm
Weight		12 Kg

Because Fisher products are subject to continuous improvement, Fisher reserves the right to modify, change, or alter any design or specifications without notice and without incurring any obligation. Fisher reserves the right to make changes and improvements upon its products without any obligation to install such changes upon any of its products previously manufactured.

RECOMMENDED TEST EQUIPMENT

The following test equipment is recommended to completely test and align the Receiver:

- Line Voltage Isolation Transformer.
- AC DC Multimeter.
- Accurately Calibrated AC Voltmeter.
- Oscilloscope (Flat to 100 kHz Minimum)
- Low-Distortion Audio Sine-Wave Generator
- Harmonic Distortion Analyzer
- Two (2) Load Resistors, 8-ohms, 250 Watts (Minimum Rating)
- Low-Distortion AM-FM Signal Generator
- 10.7 MHz Sweep Generator
- Multiplex Generator
- 455 kHz Sweep Generator

HARMONIC DISTORTION TEST

CAUTION: Limit the following tests to no more than ten minutes each. Use 8-ohm resistors with a minimum power rating of 250 watts when connecting a load across the SPEAKERS terminals.

CONTROL SETTINGS:

Unplug the AC power cord and set the front panel controls as follows:

BASS, TREBLE, and BALANCE controls to center positions

POWER push button out (not depressed)

SPEAKERS switch to PHONES

FUNCTION switch to AUX

HIGH FILTER, MONO MODE, TAPE MONITOR and LOUDNESS CONTOUR out (not depressed)

VOLUME control to MINIMUM position

LEFT CHANNEL DRIVEN

ONE CHANNEL DRIVEN:

- 1) Connect a low distortion audio generator to LEFT AUX IN jack. Set generator frequency to 1 kHz and output to minimum.
- 2) Connect an 8-ohm load resistor between SPEAKERS MAIN LEFT and COM terminals. Connect a Harmonic Distortion analyzer and an AC VTVM in parallel across the 8-ohm load.
- 3) Connect the AC power cord and set SPEAKERS switch to MAIN. Turn VOLUME control to MAX.
- 4) Increase generator output for RS-1035 35W RMS (16.7V across the 8-ohm load). Harmonic Distortion Analyzer should measure 0.2% distortion or less.
- 5) Repeat steps 1 through 4 for RIGHT CHANNEL.

BOTH CHANNELS DRIVEN

Connect 8-ohm load resistors across LEFT and RIGHT MAIN SPEAKERS terminals. Depress "MONO MODE" pushbutton. Adjust generator output and "BALANCE" control for RS-1035: 35W at Left and Right Channels (RS-1035: 16.7V) across the 8-ohm loads. Harmonic Distortion Analyzer should measure RS-1035: 0.2% distortion or less at each channel.

DISASSEMBLY INSTRUCTIONS

Removal Of Chassis From Cabinet

1. Remove 4 screws from left and right sides of cabinet.
2. Separate cabinet from chassis.
3. Remove 6 screws from bottom of cabinet. (Do Not Remove Leg From Bottom Of Cabinet).
4. Separate bottom of cabinet from chassis.

Removal Of Front Panel Assembly

1. Remove all Knobs with the exception of push buttons.
2. Remove 4 screws from top of panel.
3. Remove nut from "Function" and "Speaker" switches located on Front Panel Assembly.
4. Separate Front Panel Assembly from chassis.

Removal Of Meter

1. Unsolder leads from meter terminals.
2. Remove One screw and Meter Cover.
3. Grasp Meter firmly and pull back separating Meter from panel.

Removal Of Slide Rail Pointer

1. Remove Metal Slide Pointer from Slide Rail Pointer.
2. Remove 2 screws from top of Slide Rail Pointer.

Removal And Replacement Of Dial Lamps

1. Remove Dial P.C. Board from Shelter Light with two flaps straight.
2. Grasp Dial Lamp and extract from lamp grommet holder.

Testing and troubleshooting any of the P.C. boards do not require removal since all component parts are top board mounted. For underneath board inspection purposes or when a defective component is to be unsoldered and replaced, the P.C. Board can be sufficiently turned over by only removing the hold down hardware. Where it necessitates complete removal of any individual board then proceed as follows.

Removal Of AM-FM RF/IF/MPX Amp P.C. Board

1. Unscrew 2 screws from Drum. (Do Not Remove Dial String From Drum).
2. Remove 6 screws from P.C. Board.
3. Slide P.C. Board from plastic clip.
4. Unsolder connections and remove P.C. Board.

Removal Of EQ-Amp P.C. Board

1. Unsolder wire wraps from terminals.
2. Remove 4 hold down screws.

Removal Of Power Supply P.C. Board

1. Unsolder wire wraps from terminals.
2. Remove 5 hold down screws.
3. Slide P.C. Board from plastic clip.

Removal Of Power Amp P.C. Board

1. Unsolder wire wraps from terminals.
2. Remove 4 screws holding Power IC (STK-082).
3. Remove screw holding posistor
4. Unscrew and remove plastic clip from P.C. Board.


Removal Of Boostor P.C. Board

1. Unsolder wire wraps from terminals.
2. Remove 2 hold down screws.


Removal Of Tone Control Amp P.C. Board

1. Unsolder wire wraps from terminals.
2. Remove 2 screws from left and right sides of 4 push button switch.
3. Remove 4 nuts variable resistors.
4. Unscrew and remove 2 plastic clips from P.C. Board.

EXPLODED VIEW OF CABINET AND CHASSIS FRONT MOUNTED ASSEMBLIES

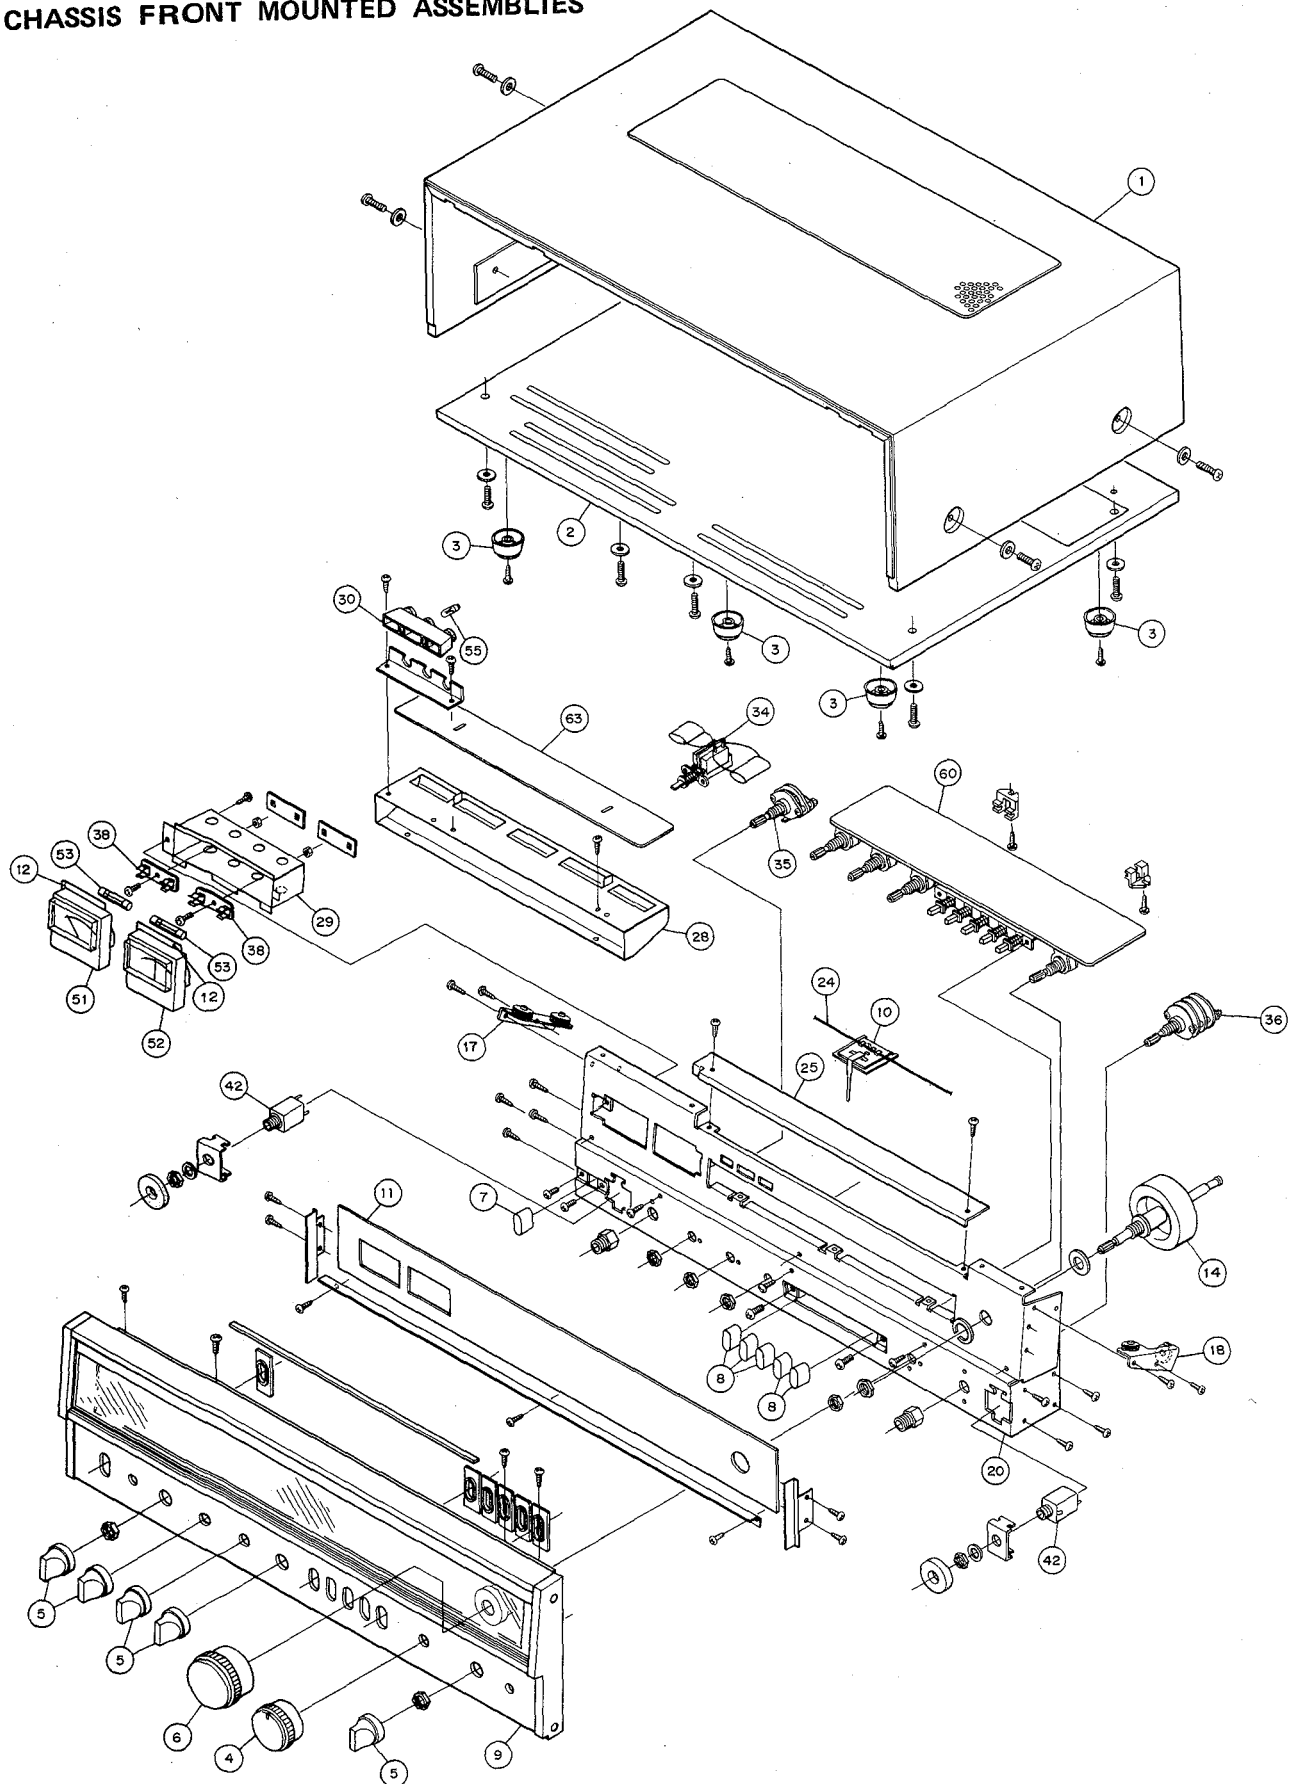

EXPLODED VIEW OF CHASSIS AND REAR MOUNTED ASSEMBLIES

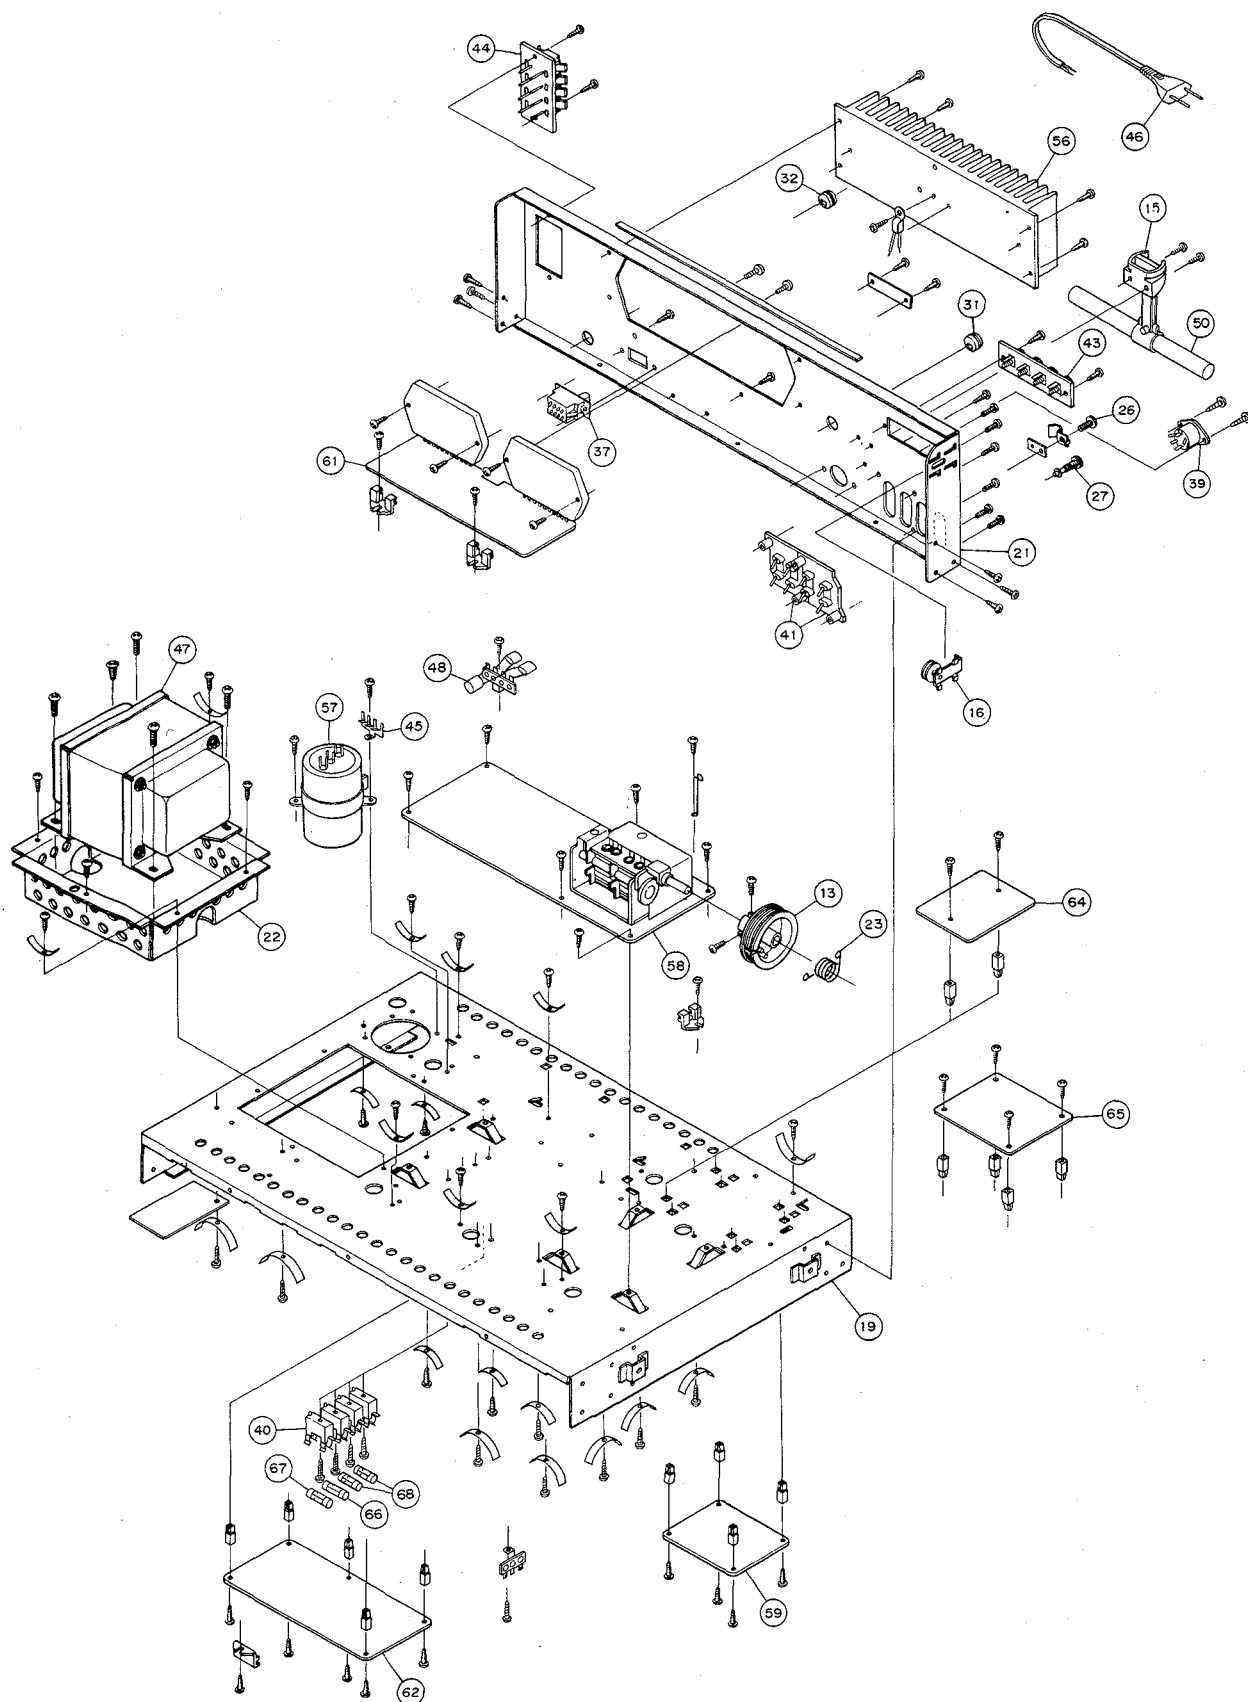

PARTS LIST

PACKING PARTS LIST

Ref. No.	Part Number	Description
	1316 1139 59209	Box Corrugate-EXP
	1316 2119 01362	Bag Polyethylene-EXP (Set)
	1316 2119 01470	Bag Polyethylene-EXP
	1316 3009 21510	Pad (Right)
	1316 3009 21520	Pad (Left)

ACCESSORIES PARTS LIST

Ref. No.	Part Number	Description
	4 2449 20230	Antenna FM
	1316 4119 59015	Explanatory Booklet (English & German)
	1316 4519 14700	Guarantee Card

CABINET PARTS LIST

Ref. No.	Part Number	Description
1	1310 1101 08400	Cabinet Assy
2	1312 1105 17100	Plate Bottom
3	1312 1801 13200	Leg

APPEARANCE PARTS LIST

Ref. No.	Part Number	Description
4	1310 1001 35400	Knob, Volume
5	1310 1001 35500	Knob, Controls
6	1310 1001 41400	Knob, Tuning
7	1312 1001 35600	Knob Power SW
8	1312 1001 35700	Knob Push SW
9	1310 1016 22609	Dress Panel Assy
10	1310 3011 17800	Dial Pointer Assy
11	1312 1201 28105	Dial Plate
12	1312 1406 12300	Plate Color

CHASSIS PARTS LIST


Ref. No.	Part Number	Description
13	1310 3002 11300	Drum Assy Tuning Gang
14	1310 3003 19100	Tuning Shaft Assy
15	1310 3008 11901	Support, Antenna Assy
16	* 1310 3020 05800	Pulley Assy Rear
17	* 1310 3020 06900	Pulley Assy Left Front
18	* 1310 3020 07000	Pulley Assy Right Front
19	* 1312 3301 21800	Chassis
20	* 1312 3305 20001	Front Panel
21	* 1312 3306 22230	Rear Panel
22	* 1312 3617 15100	Metal Mount Trans
23	1312 4111 00400	Tension Spring
24	1312 4112 10200	Dial Cord
25	1312 4120 11900	Slide Rail Dial Pointer
26	1312 4201 12701	Screw, Coax Clamp
27	1312 4201 15400	Screw, Ground
28	* 1312 6110 23701	Housing, Dial Lamp P.C.B.
29	* 1312 6110 25800	Housing, Meter Lamp
30	1312 6111 19600	Housing, Stereo Beacon Lamp
31	1312 6111 14200	Bushing, AM ANT Lead
32	1312 6111 14200	Bushing, Line Cord

ELECTRICAL PARTS LIST


Ref. No.	Part Number	Description
34	4 2319 23912	Switch, Power
35	4 2319 34021	Switch, Rotary, Speaker
36	4 2312 00790	Switch, Rotary, Function
37	4 2319 21530	Switch, Slide, Volt Select
38	4 2359 20160	Holder, Lamp
39	4 2359 20190	Socket DIN (TAPE)
40	4 2359 21021	Fuse Holder
41	4 2359 22710	Rear Accessory Jacks
42	4 2359 22730	Jack, Phones/Record Out
43	4 2379 21460	Terminal, Antenna Connector
44	4 2379 21560	Terminal, Speakers Connector
45	4 2379 21840	Terminal
46	* 4 2439 20526	Line Cord
47	4 2512 00320	Power Transformer (110 - 220V)
48	4 2659 20190	Choke Coil (AM Out)
50	4 2579 25110	AM Antenna (LW/MW)
51	4 5119 20592	Meter, Signal Strength
52	4 5119 20602	Meter, Center of Channel
53	4 6129 20280	Pilot Lamp (Meter Lamp)
55	4 6129 20726	Pilot Lamp (Stereo Indicator)
56	1312 6201 22800	Heat Sink
C01,02	C1HCDK471SL	Cap. Ceramic 470pF 50V ±10%
C03	C1HFRK273A	Cap. Mylar 0.027 μF 50V ±10%
C04	C1HFRM683A	Cap. Mylar 0.068 μF 50V ±20%
C06	C1HYDZ473A	Cap. Ceramic 0.047 μF 50V +80,-20%
57(C08)	4 2239 21170	Cap. Electrolytic 4700 μF x2 50V
C09	C1HCDC010SL	Cap. Ceramic 1pF 50V ±0.25%
C10,11	C2EHRM103A	MP Con. 0.01 μF 250V ±20%
R02	R2EDPJ272A	Resistor Carbon 2.7k 1/4W ±5%
R03,04	R3AXPK151A	Resistor Oxide Metal Film 150 1W ±10%
R05	R2EDPJ122A	Resistor Carbon 1.2k 1/4W ±5%
R06	R2HCPK332A	Resistor Solid 3.3k 1/2W ±10%
R07,08	R2EDPJ104A	Resistor Carbon 100k 1/4W ±5%
58	* 1310 4001 93100	RF IF MPX PCB Assy
59	* 1310 4001 72120	EQ PCB Assy
60	* 1310 4001 72133	Tone PCB Assy
61	* 1310 4001 79306	Power Amp PCB Assy
62	* 1310 4001 93200	Power Supply PCB Assy
63	* 1310 4001 72166	Dial Lamp PCB Assy
64	* 1310 4001 79500	Booster PCB Assy
65	* 1310 4001 75303	LW/MW Conv. PCB Assy
66	4 2349 20380	Fuse 1A Slow Blow
67	4 2349 20590	Fuse 4A Slow Blow
68	4 2349 21570	Fuse 6.3A 250V Time Lag

NOTE: * Asterisk indicates not service part.

FUNCTIONAL BLOCK DIAGRAM

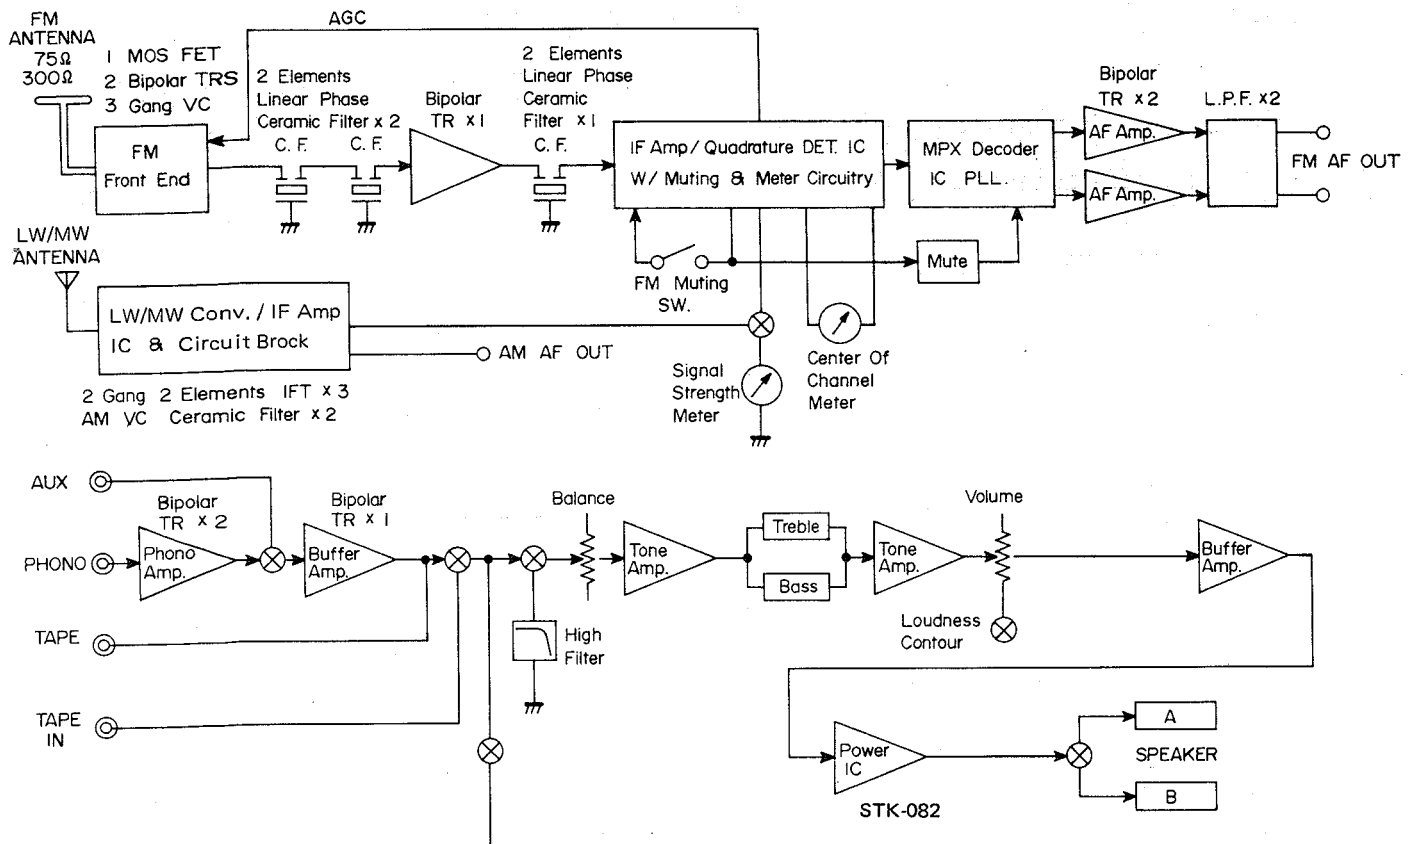


DIAL CORD STRINGING

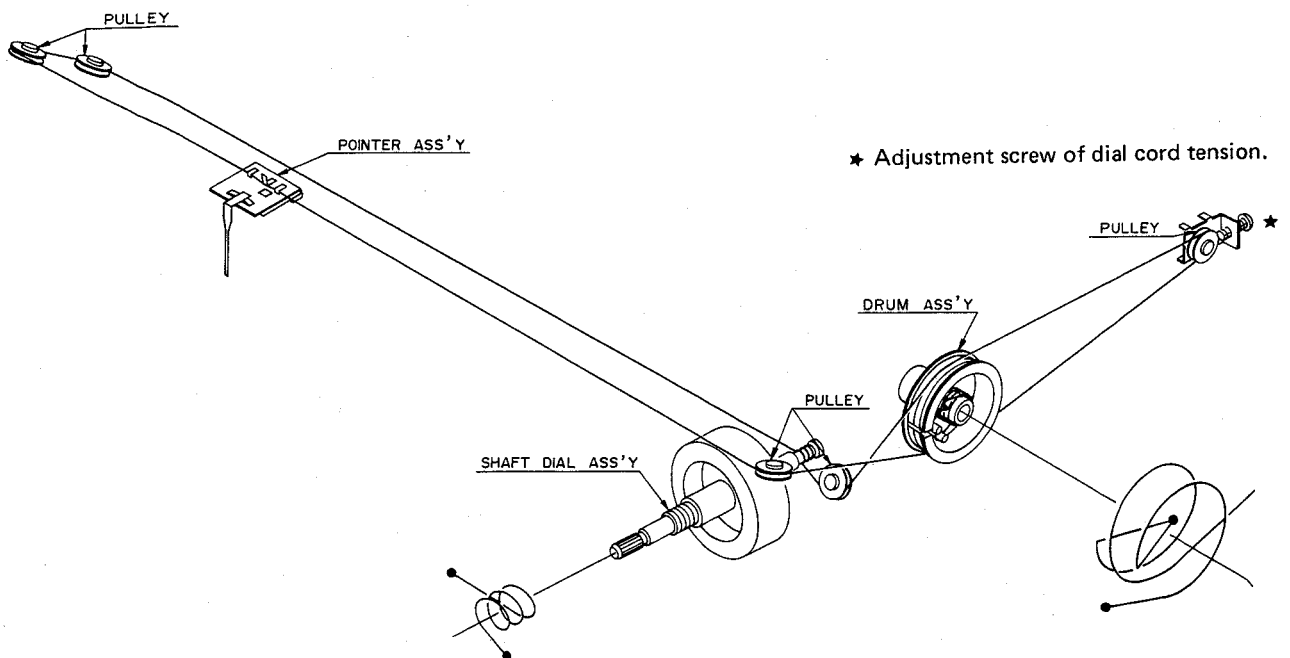

AM-FM MULTIPLEX ALIGNMENT

AM ALIGNMENT


 
For Alignment: Maintain generator output as low as possible for suitable indication.

AM ALIGNMENT						
Step	Adjusting circuit	Connection		Position of Tuning dial	Adjustment	V.T.V.M. Oscilloscope
		Input	Output			
1	IF	Connect 455 kHz sweep generator to VC4.	Connect Oscilloscope to Test Point TP 19.	Near max. capacity of VC at position of on interference	AM 1st 9-21310 AM DET 9-21291	
2	MW(RF)	Connect AM generator to EXT AM antenna and GND terminals. Set to 600 kHz. Modulate with 30%, 400 Hz.	Connect Oscilloscope and AC. V.T.V.M. to speaker terminal.	600 kHz	AM BAR ANT 9-25110 MW OSC 9-20851	Max.
3		Change frequency to 1400 kHz.		1400 kHz	TC 01, 03	
4	LW(RF)	Change frequency to 160 kHz.		160 kHz	LW OSC 9-20860	Max.
5		Change frequency to 350 kHz.		350 kHz	TC 02, 04	
6	Repeat adjustments.					

1. Variable capacitor completely closed
2. Set the dial pointer to very left line dial scale.
3. Connect sweep generator, SG, V.T.V.M. and oscilloscope.
4. Function switch to "MW" or "LW"
5. Use a screwdriver with plastic grip for all adjustments.

FM ALIGNMENT

  FM ALIGNMENT

Step	Adjusting circuit	Connection		Position of Tuning dial	Adjustment	V.T.V.M. Oscilloscope
		Input	Output			
1	IF	Connect sweep 10.7 MHz generator to test point VC2, through 0.01 μ F.	Connect Oscilloscope to Test Point TP 7.	Near max. capacity of VC, at position of on interference	IFT In FRONT END	
2	Quadrature Detector		Connect Oscilloscope to Test Point TP 6.		FM DET 9-21320	
3	RF	Connect FM RF generator through two 120-ohm resistors to FM antenna screw terminals. Set generator to 90 MHz, modulate with 400 Hz to provide ± 75 kHz deviation. Set generator output attenuator as low as possible.	Connect V.T.V.M. to Speaker terminal.	90 MHz	LA LR	Max.
4		Change generator setting to 106 MHz.		106 MHz	TCA TCR.	Max.
5	Repeat adjustments.					

1. Variable capacitor completely closed
2. Set the dial pointer to very left line of dial scale.
3. Connect sweep generator, FM, SG, V.T.V.M. and oscilloscope. FM ANT input impedance is 75 ohm.
4. Function switch to "FM"
5. Use a screwdriver with plastic grip for all adjustments.

FM MPX ALIGNMENT


FM MPX ALIGNMENT

Step	Adjusting circuit	Connection		Position of Tuning dial	Adjustment	
		Input	Output			
1	PLL IC FO (19 kHz) Adjustment	None	Connect Frequency counter or synchroscope to TP 8.	Near max. capacity of VC, at position of on interference	Adjust VR01 (5k-B) so that frequency counter or synchroscope indicate 19 kHz.	
2	FM STEREO Signal Separation	As above Steps 3,4 except modulation Modulate LEFT Channel ± 67.5 kHz -400 Hz audio and ± 7.5 kHz -19 kHz pilot carrier.	Connect V.T.V.M. to output terminal (R Channel)		VR02. (1k-B)	V.T.V.M. Min.
		As above except modulate RIGHT Channel.	Connect V.T.V.M. to output terminal (L Channel).			
3	Repeat steps 1,2. Set at position with max. channel separation.					




1. Variable capacitor completely closed
2. Connect FM stereo SG and V.T.V.M.
3. Function switch to "FM"
4. Use a screwdriver with plastic grip for all adjustments.

ALIGNMENT WAVE FORMS

WITH OSCILLOSCOPE TIME BASE SETTINGS

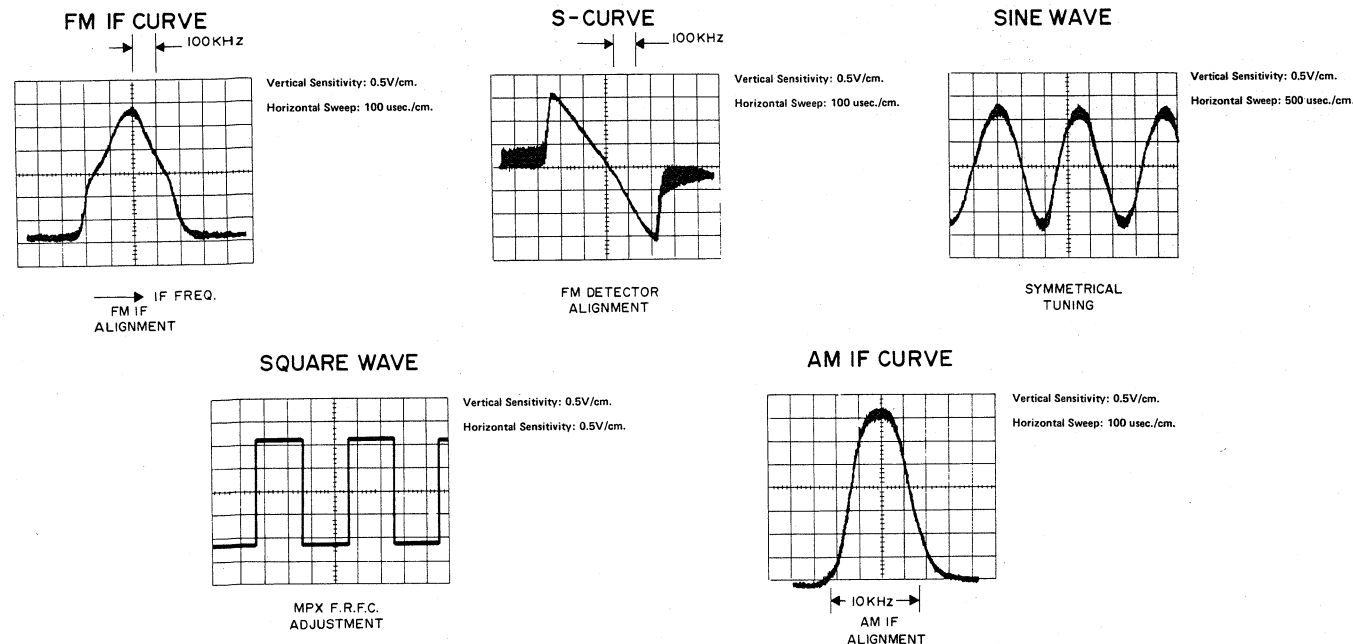

AM-FM RF/IF MPX BOARD LAYOUT

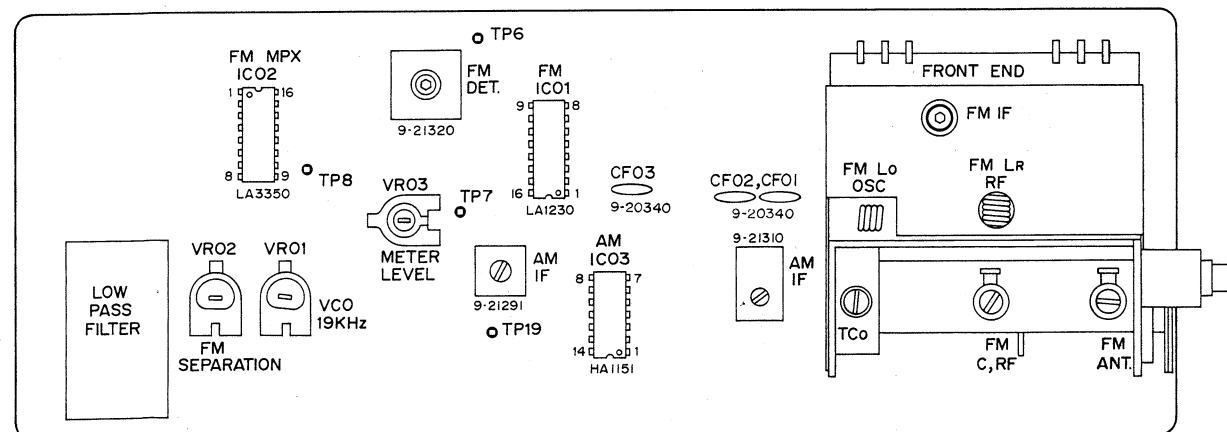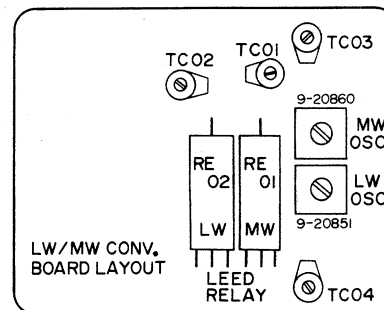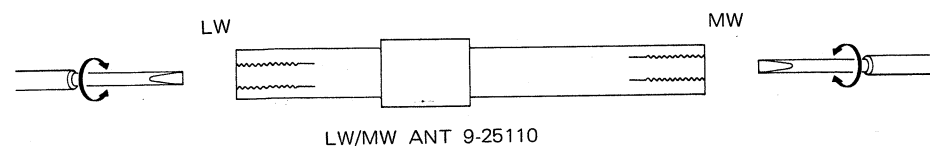


PARTS LIST

RF. IF. MPX PCB Assy
1310 4001 93100


Ref. No.	Part Number	Description	Ref. No.	Part Number	Description
SEMICONDUCTORS					
VR01	4 1259 20370	Front End	D01, 02	2055 9040 44210	Diode DS-442
VR02	4 2229 22842	VR 5k (19kHz)	03, 04		
VR03	4 2229 24210	VR 1k (Separation)	IC01	2065 0151 23013	IC LA1230
	4 2229 25400	VR 50k Meter Level	IC02	2065 0743 35012	IC LA3350
	4 2279 20340	Ceramic Filter	IC03	1KK-HA1151	IC HA1151
	4 2279 20320	Low Pass Filter 19kHz	Q01	2035 5100 53650	TR 2SC536E
	4 2569 21291	IF Trans AM (Black)	Q02, 03	2035 5151 57079	TR 2SC1570 LG
	4 2569 21310	IF Trans AM (Red)	Q04	2035 5500 93040	TR 2SC930D
	4 2569 21320	IF Trans FM (Quadrature)			
L01	4 2539 20170	Choke Coil	RESISTORS		
L02	4 2539 20370	10 μ H \pm 10%	R01	R2EDSJ331A	Carbon 330 1/4W \pm 5 %
L03	4 2539 20380	18 μ F \pm 5%	R02	R2EDSJ104A	Carbon 100k 1/4W \pm 5 %
CAPACITORS			R03	R2EDSJ562A	Carbon 5.6k 1/4W \pm 5 %
C01, 02	C1HBDM473W	Semicon 0.047 μ F 50V \pm 20%	R04	R2EDSJ222A	Carbon 2.2k 1/4W \pm 5 %
03			R05	R2EDSJ101A	Carbon 100 1/4W \pm 5 %
C06, 07	C1HYSZ473A	Ceramic 0.047 μ F 50V +80,-20%	R06	R2EDSJ563A	Carbon 56k 1/4W \pm 5 %
C08	C1CUEX105A	Sint. Alu. 1 μ F 16V +40,-20%	R07	R2EDSJ222A	Carbon 2.2k 1/4W \pm 5 %
C09	C1CRE-475A	Electrolytic 4.7 μ F 16V \pm 10%	R08	R2EDSJ473A	Carbon 47k 1/4W \pm 5 %
C10	C1HCSK331SL	Ceramic 330pF 50V \pm 10%	R09	R2EDSJ154A	Carbon 150k 1/4W \pm 5 %
C11	C1CUEX474A	Sint. Alu. 0.47 μ F 16V +40,-20%	R10	R2EDSJ332A	Carbon 3.3k 1/4W \pm 5 %
C12, 13	C1CUEX224A	Sint. Alu. 0.22 μ F 16V +40,-20%	R11	R2EDSJ822A	Carbon 8.2k 1/4W \pm 5 %
C14	C1CRE-105A	Electrolytic 1 μ F 16V	R12	R2EDSJ222A	Carbon 2.2k 1/4W \pm 5 %
C15	C1HYSZ473A	Ceramic 0.047 μ F 50V +80,-20%	R13, 14	R2EDSJ332A	Carbon 3.3k 1/4W \pm 5 %
C16	C1CRE-227A	Electrolytic 220 μ F 16V	R15, 16	R2EDSJ474A	Carbon 470k 1/4W \pm 5 %
C17	C1VRE-106A	Electrolytic 10 μ F 35V	R17, 18	R2EDSJ333A	Carbon 33k 1/4W \pm 5 %
C18, 19	C1CUEX224A	Sint. Alu. 0.22 μ F 16V +40,-20%	R19, 20	R2EDSJ392A	Carbon 3.9k 1/4W \pm 5 %
C20	C1CUEX474A	Sint. Alu. 0.47 μ F 16V +40,-20%	R21, 22	R2EDSJ331A	Carbon 330 1/4W \pm 5 %
C21	C1HFRM473A	Mylar 0.047 μ F 50V \pm 20%	R23, 24	R2EDSJ332A	Carbon 3.3k 1/4W \pm 5 %
C22	C1HSEJ152A	Styrol 1500pF 50V \pm 5%	R25	R2EDSJ101A	Carbon 100 1/4W \pm 5 %
C23, 24	C1HFRK153A	Mylar 0.015 μ F 50V \pm 10%	R26	R2EDSJ103A	Carbon 10k 1/4W \pm 5 %
C25, 26	C1CUEX475A	Sint. Alu. 4.7 μ F 16V +40,-20%	R27	R2EDSJ101A	Carbon 100 1/4W \pm 5 %
C27, 28	C1VTRM475A	Tantal 4.7 μ F 35V \pm 20%	R28	R2EDSJ470A	Carbon 47 1/4W \pm 5 %
C29	C1CRE-107A	Electrolytic 100 μ F 16V	R29	R2EDSJ151A	Carbon 150 1/4W \pm 5 %
C31	C1CRE-106A	Electrolytic 10 μ F 16V	R30	R2EDSJ392A	Carbon 3.9k 1/4W \pm 5 %
C32, 33	C1HFRM103A	Mylar 0.01 μ F 50V \pm 20%	R31	R2EDSJ151A	Carbon 150 1/4W \pm 5 %
C36	C1HFRM103A	Mylar 0.01 μ F 50V \pm 20%	R32, 33	R2EDSJ103A	Carbon 10k 1/4W \pm 5 %
C37	C1HYSX473A	Ceramic 0.047 μ F 50V +80,-20%	R34	R2EDSJ272A	Carbon 2.7k 1/4W \pm 5 %
C38, 39	C1HFRM103A	Mylar 0.01 μ F 50V \pm 20%	R35	R2EDSJ332A	Carbon 3.3k 1/4W \pm 5 %
C40	C1HFRM102A	Mylar 0.001 μ F 50V \pm 20%	R36	R2EDSJ472A	Carbon 4.7k 1/4W \pm 5 %
C41	C1CUEX105A	Sint. Alu. 1 μ F 16V +40,-20%	R37	R2EDSJ103A	Carbon 10k 1/4W \pm 5 %
C42	C1CRE-475A	Electrolytic 4.7 μ F 16V	R38	R2EDSJ224A	Carbon 220k 1/4W \pm 5 %
C43	C1HFRM273A	Mylar 0.027 μ F 50V \pm 20%	R39	R2EDSJ391A	Carbon 390 1/4W \pm 5 %
C44	C1HRE-225AL	Electrolytic 2.2 μ F 50V	R40	R2EDUJ224A	Carbon 220k 1/4W \pm 5 %
C45	C1HCSK470SL	Ceramic 47pF 50V \pm 10%	R41	R2EDSJ222A	Carbon 2.2k 1/4W \pm 5 %
C46	C1CRE-106A	Electrolytic 10 μ F 16V	R42	R2EDSJ562A	Carbon 5.6k 1/4W \pm 5 %
C47, 48	C1HYSX223A	Ceramic 0.022 μ F 50V +80,-20%	R43	R2EDSJ101A	Carbon 100 1/4W \pm 5 %
C49	C1HCSJ150SL	Ceramic 15pF 50V \pm 5%	R44	R2EDSJ222A	Carbon 2.2k 1/4W \pm 5 %
			R45	R2EDSJ471A	Carbon 470 1/4W \pm 5 %
			R46	R2EDSJ182A	Carbon 1.8k 1/4W \pm 5 %
			R47	R2EDSJ391A	Carbon 390 1/4W \pm 5 %
			R48	R2EDSJ473A	Carbon 47k 1/4W \pm 5 %
			R51	R2EDPJ102A	Carbon 1k 1/4W \pm 5 %

AM-FM RF/IF MPX P.C.BOARD

IC TOP VIEW

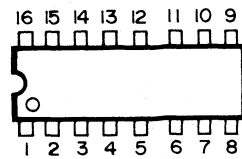

LA1230
LA3350

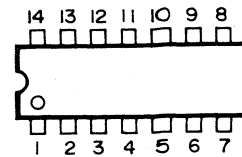


HA1151

TRANSISTOR
FRONT VIEW



2SC536
2SC1570
2SC930

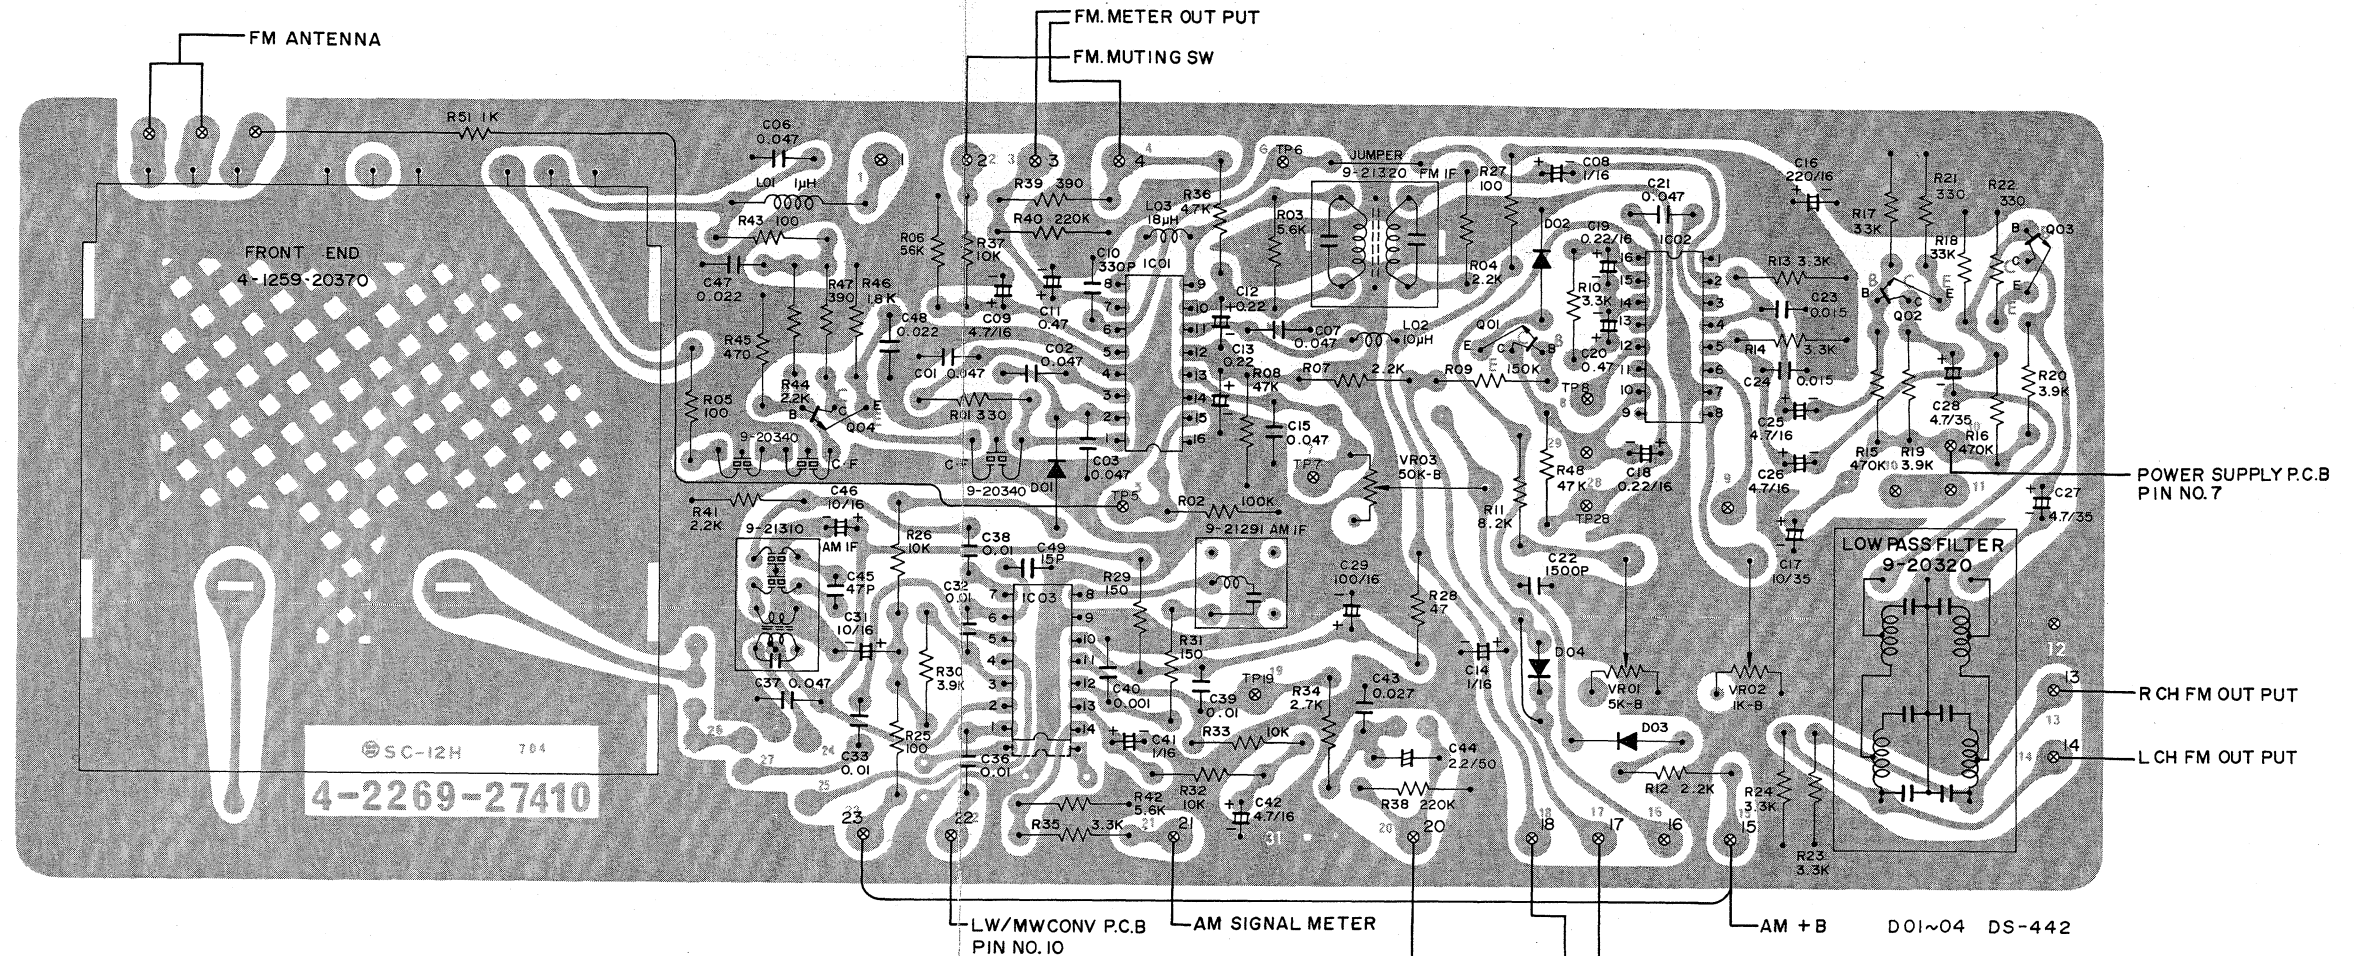

IC01 LA1230

PIN NUMBERS VOLTAGES															
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
2.9	2.9	2.9	0	1.9	5.5	5.5	5.5	5.5	13.8	3	0.01	0	5.1	0	

IC02 LA3350


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
12.6	2.7	4.8	10.5	10.4	13.4	0	0.4		0.6	2	2.4	1.9	2	2	2.7

IC03 HA1151


1	2	3	4	5	6	7	8	9	10	11	12	13	14		
0.97	12.7	10.9	12.7	3.5	1.24	2.1	8.5	0	13.3	1.6	0.7	1.4	0		

TRANSISTOR DC VOLTAGES				
SYMBOL No.	DEVICE	B	C	E
Q01	2SC536E	1.1	0.6	0.5
Q02	2SC1570LH	2	16.5	1.4
Q03	2SC1570LH	2	16.5	1.4
Q04	2SC930D	2.2	12.8	1.6

FM IF IC LA1230 SIGNAL FLOW

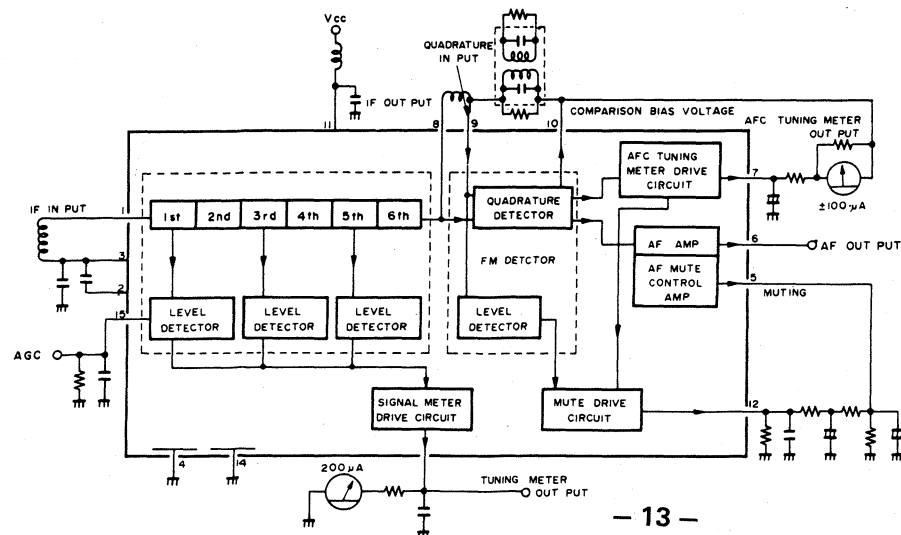


FM MPX IC LA3350 SIGNAL FLOW

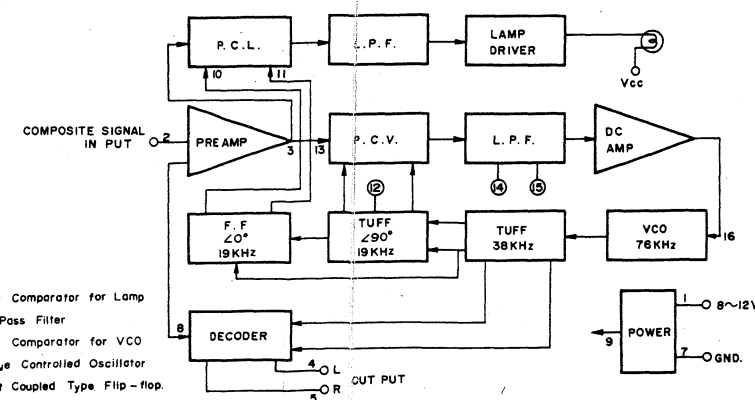


P.C.L. : Phase Comparator for Lamp
L.P.F. : Low Pass Filter
P.C.V. : Phase Comparator for VCO
VCO : Voltage Controlled Oscillator
TUFF : Direct Coupled Type Flip-flop

AM RF IF IC HA1151 SIGNAL FLOW

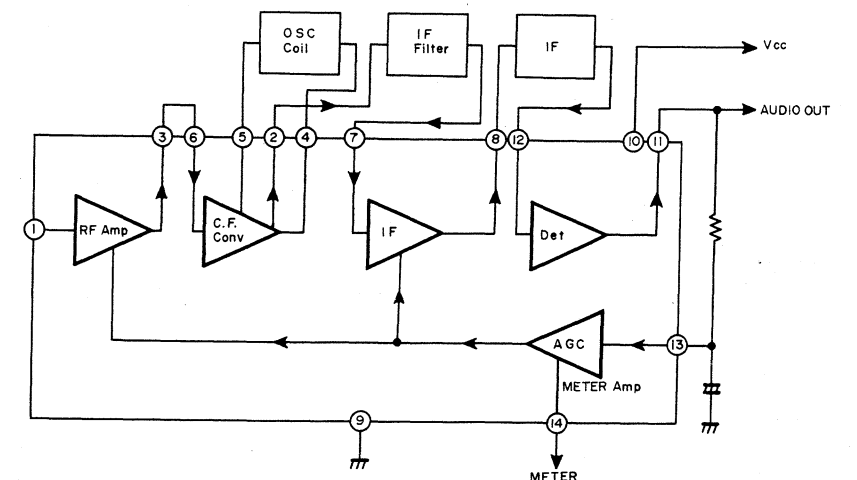


LW/MW CONVERTER P.C.BOARD

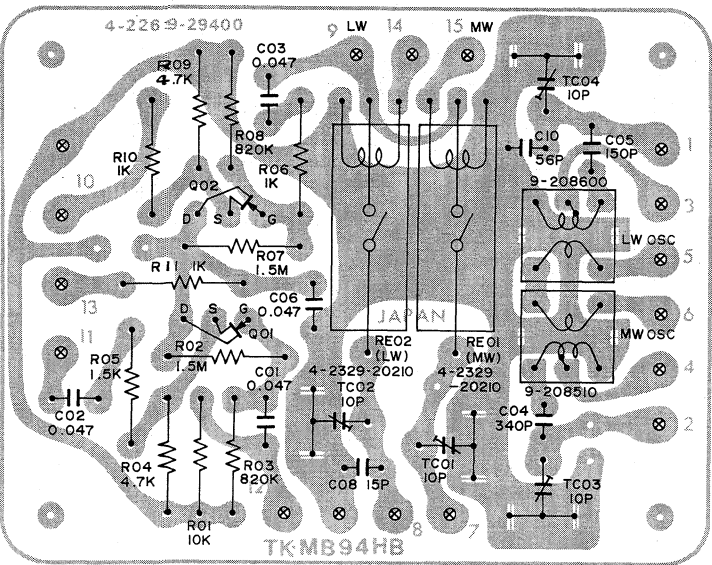

Q01, Q02 2SK41 (F)


FET DC VOLTAGES				
SYMBOL No.	DEVICE	D	S	G
Q01	2SK41	11.6	5.4	3.9
Q02	2SK41	11.6	5.1	3.8

EQ P.C. BOARD

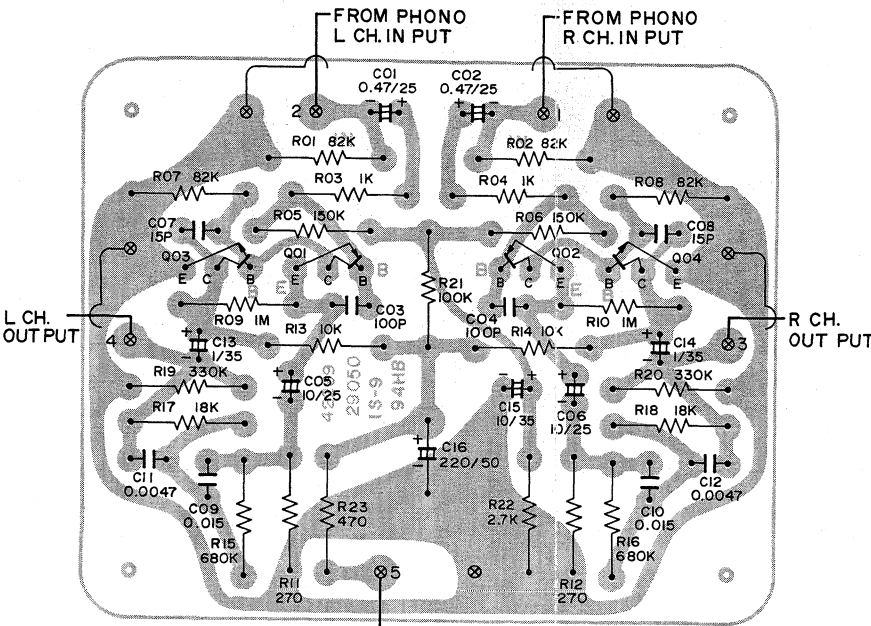

TRANSISTOR DC VOLTAGES				
SYMBOL No.	DEVICE	B	C	E
Q01, Q02	2SA763E	0.77	0.59	1.3
Q03, Q04	2SC1570LH	0.59	11	0


BOOSTOR P.C.BOARD

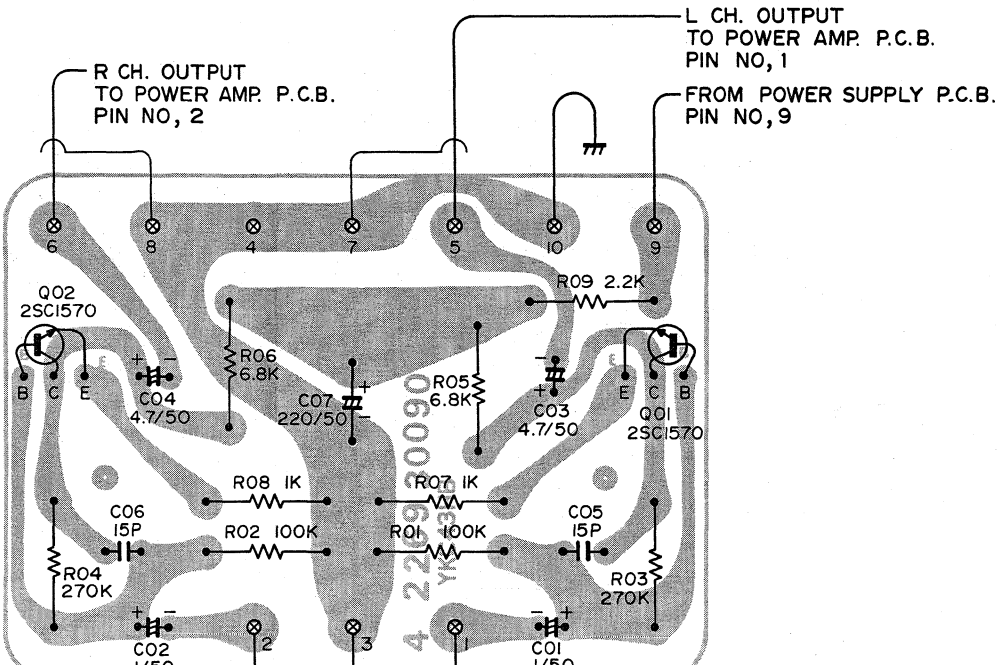


TRANSISTOR DC VOLTAGES				
SYMBOL No.	DEVICE	B	C	E
Q01, Q02	2SC1570	2.6	11.2	2.0

TONE CONTROL AND MODE SELECTOR P.C.BOARD

IFT FRONT VIEW TRANSISTOR FRONT VIEW

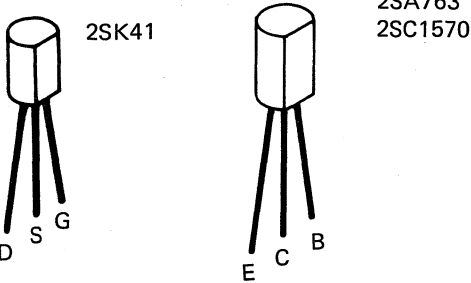


TRANSISTOR DC VOLTAGES				
SYMBOL No.	DEVICE	B	C	E
Q01, Q02	2SC1570LH	18.9	33.0	18.6
Q03, Q04	2SC1570LH	18.5	33.0	18.1
Q05, Q06	2SC1570LH	0.6	19.0	0

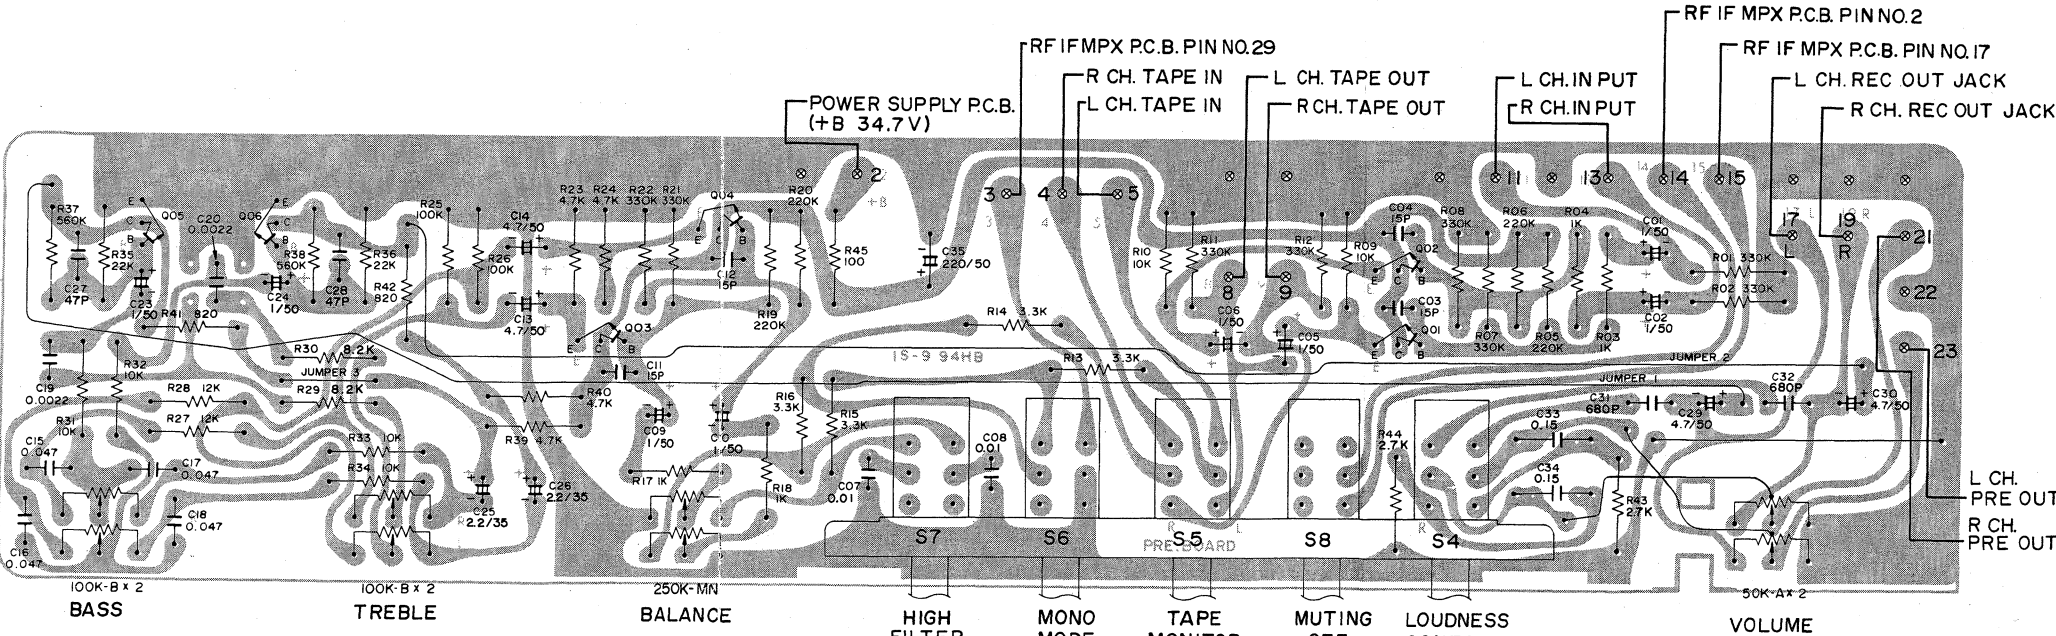

BOTTOM VIEW


POWER AMP IC STK-082 SCHEMATIC

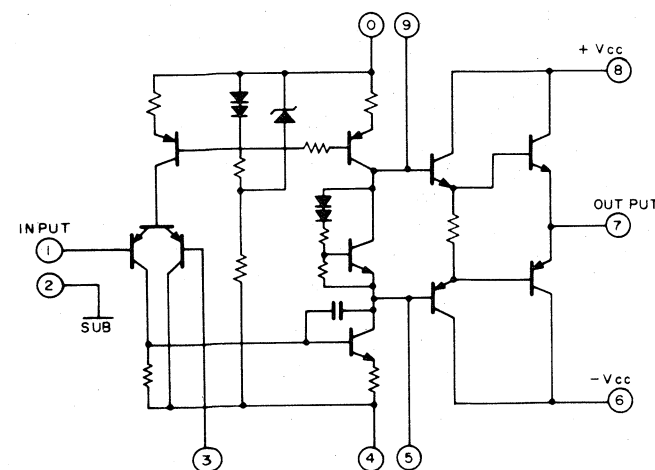

IC01,02
STK-082


PIN NUMBERS VOLTAGES					
4	5	6	8	9	10
36.7	-1.3	38.1	38.4	1.2	36.7

POWER AMP P.C.BOARD

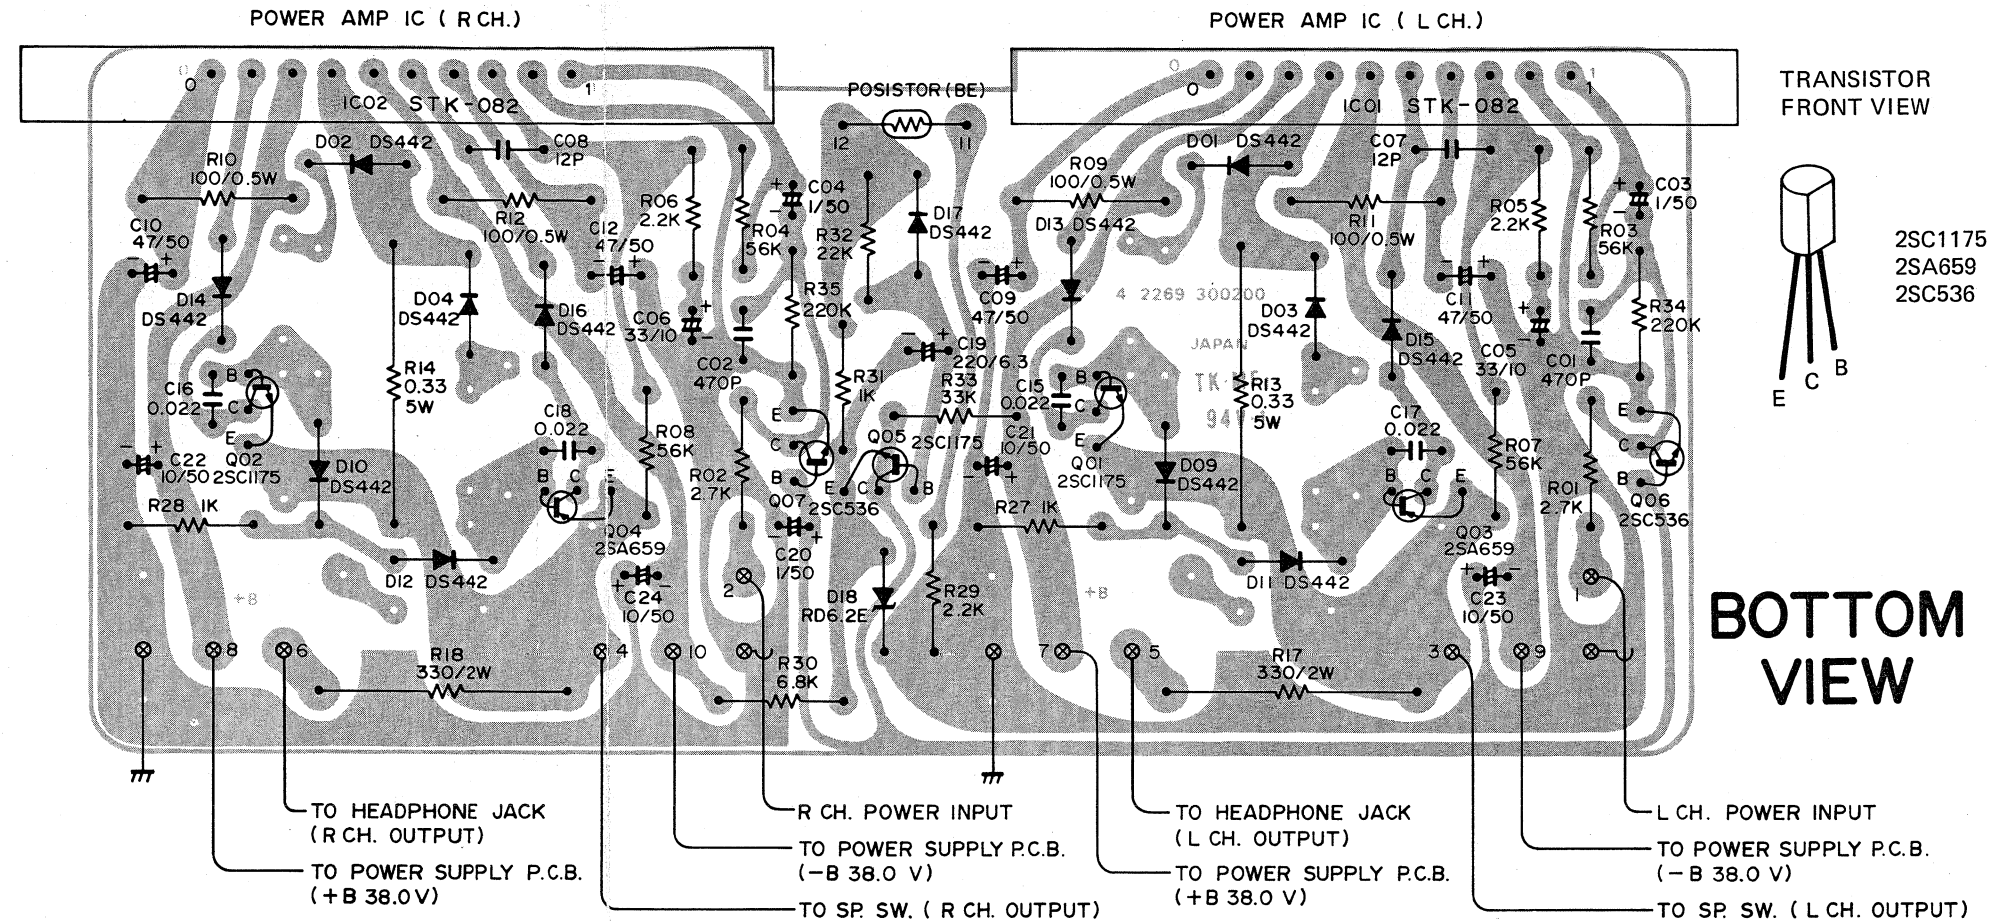


BOTTOM VIEW

POWER SUPPLY P.C.BOARD

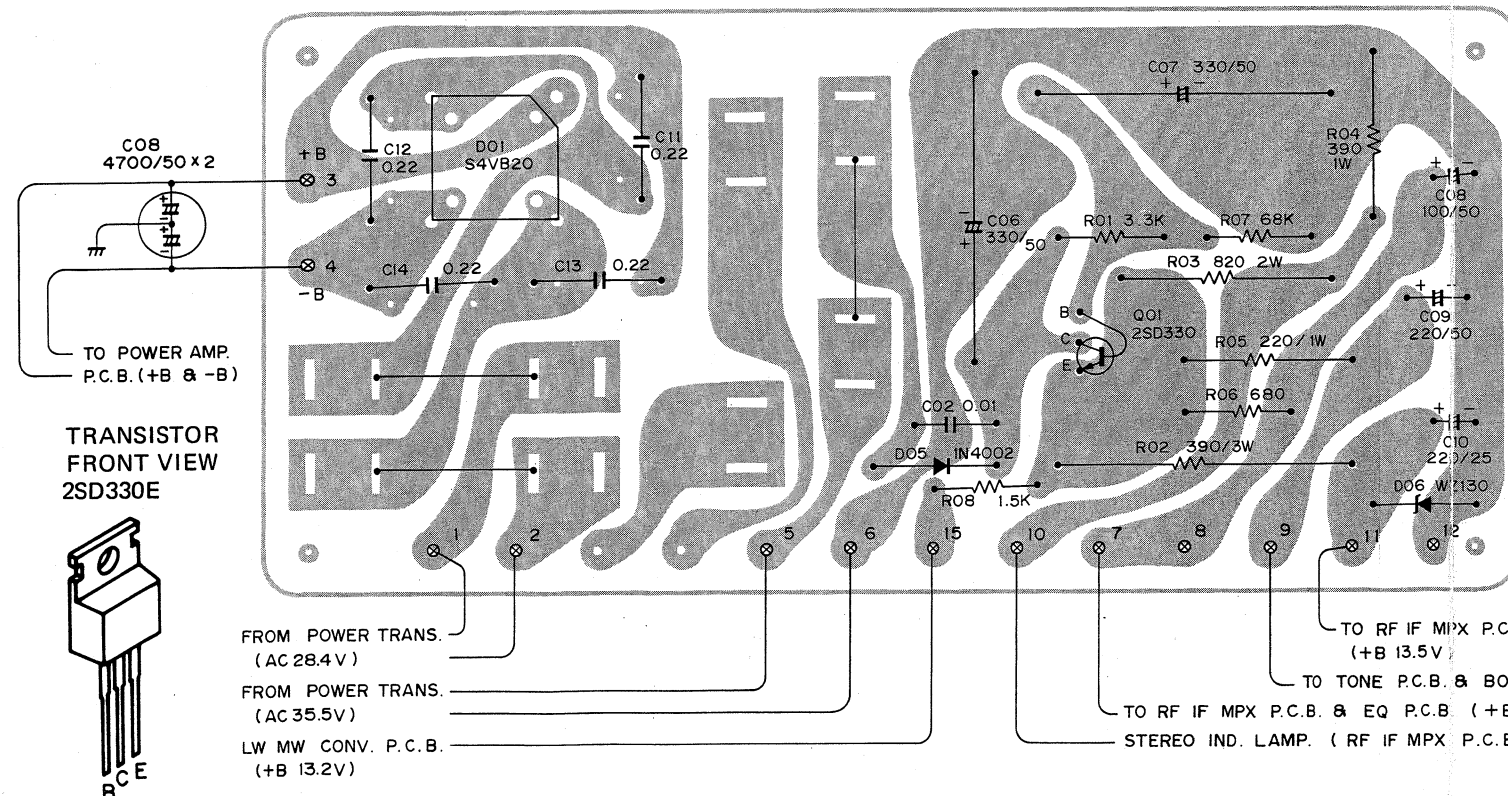

DIAL LAMP P.C.BOARD

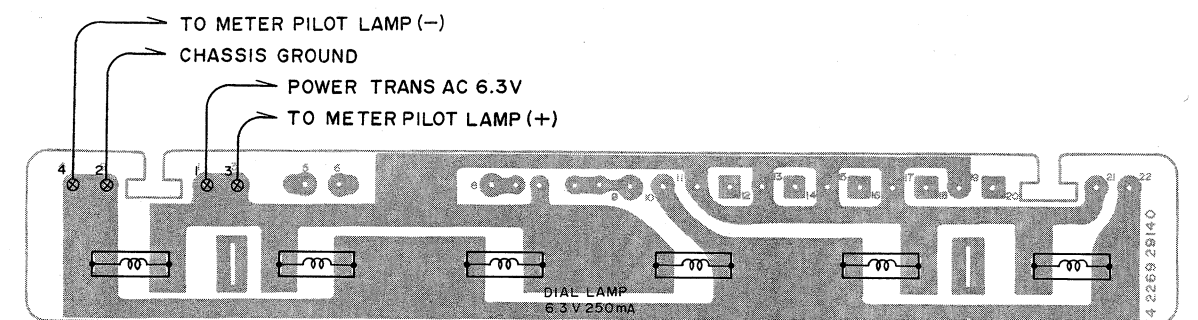


BOTTOM VIEW

BOTTOM VIEW

TRANSISTOR DC VOLTAGES				
SYMBOL No.	DEVICE	B	C	E
Q01	2SD330E	39.9	44.1	39.4

DIODE FRONT VIEW

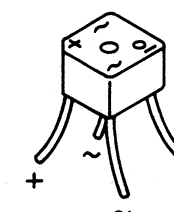

PARTS LIST

EQ PCB Assy
1310 4001 72120

Ref. No.	Part Number	Description
CAPACITORS		
C01, 02	C1EUBM474A	Sint, Alu 0.47 μ F 25V \pm 20 %
C03, 04	C1HCSK101SL	Ceramic 100pF 50V \pm 20 %
C05, 06	C1ERB-106A	Electrolytic 10 μ F 25V
C07, 08	C1HCSJ150SL	Ceramic 15pF 50V \pm 5 %
C09, 10	C1HFAJ153A	Mylar 0.015 μ F 50V \pm 5 %
C11, 12	C1HFAJ472A	Mylar 0.0047 μ F 50V \pm 5 %
C13, 14	C1VTRM105A	Tantalum 1 μ F 35V \pm 20 %
C15	C1VTRM106A	Tantalum 10 μ F 35V \pm 20 %
C16	C1HRB-227A	Electrolytic 220 μ F 50V

SEMICONDUCTORS		
Q01, 02	TJJ-2SA763-5	TR 2SA763E
Q03, 04	203 5 5151 57089	TR 2SC1570LH

RESISTORS				
R01, 02	R2EDSJ823A	Carbon 82k	1/4W	\pm 5 %
R03, 04	R2EDSJ102A	Carbon 1k	1/4W	\pm 5 %
R05, 06	R2EDSJ154A	Carbon 150k	1/4W	\pm 5 %
R07, 08	R2EDSJ823A	Carbon 82k	1/4W	\pm 5 %
R09, 10	R2EDSJ105A	Carbon 1M	1/4W	\pm 5 %
R11, 12	R2EDSJ271A	Carbon 270	1/4W	\pm 5 %
R13, 14	R2EDSJ103A	Carbon 10k	1/4W	\pm 5 %
R15, 16	R2EDSJ684A	Carbon 680k	1/4W	\pm 5 %
R17, 18	R2EDSJ183A	Carbon 18k	1/4W	\pm 5 %
R19, 20	R2EDSJ334A	Carbon 330k	1/4W	\pm 5 %
R21	R2EDSJ104A	Carbon 100k	1/4W	\pm 5 %
R22	R2EDSJ272A	Carbon 2.7k	1/4W	\pm 5 %
R23	R2EDSJ471A	Carbon 470	1/4W	\pm 5 %

BOOSTOR PCB Assy
1310 4001 79500

CAPACITORS		
C01, 02	C1HRB-105A	Electrolytic 1 μ F 50V
C03, 04	C1HRE-475AL	Electrolytic 4.7 μ F 50V
C05, 06	C1HCSJ150SL	Ceramic 15pF 50V \pm 5 %
C07	C1HRB-227A	Electrolytic 220 μ F 50V

SEMICONDUCTORS		
Q01, 02	2035 5151 57079	TR 2SC1570LG

RESISTORS				
R01, 02	R2EDSJ104A	Carbon 100k	1/4W	\pm 5 %
R03, 04	R2EDSJ274A	Carbon 270k	1/4W	\pm 5 %
R05, 06	R2EDSJ682A	Carbon 6.8k	1/4W	\pm 5 %
R07, 08	R2EDSJ102A	Carbon 1k	1/4W	\pm 5 %
R09	R2EDSJ222A	Carbon 2.2k	1/4W	\pm 5 %

TONE PCB Assy
1310 4001 72133

Ref. No.	Part Number	Description
	4 2229 26180	VR-50k Volume
	4 2229 25380	VR-250k Balance
	4 2229 25390	VR-100k Bass/Treble
S7	4 2319 34060	SW Push 5 Key High Filter,
S6, S5		Mono Mode, Tape Monitor,
S8, S4		Muting Off, Loudness Contour

CAPACITORS				
C01, 02	C1HRE-105A	Electrolytic 1 μ F	50V	
C03, 04	C1HCSJ150SL	Ceramic 15pF	50V	\pm 5 %
C05, 06	C1HRE-105AL	Electrolytic 1 μ F	50V	
C07, 08	C1HFAJ103AL	Mylar 0.01 μ F	50V	\pm 5 %
C09, 10	C1HRE-105AL	Electrolytic 1 μ F	50V	
C11, 12	C1HCSJ150SL	Ceramic 15pF	50V	\pm 5 %
C13, 14	C1HRE-475AL	Electrolytic 4.7 μ F	50V	
C15, 16	C1HFAJ473A	Mylar 0.047 μ F	50V	\pm 5 %
17, 18				
C19, 20	C1HFAJ222A	Mylar 0.0022 μ F	50V	\pm 5 %
C23, 24	C1HRE-105AL	Electrolytic 1 μ F	50V	
C25, 26	C1VTRM225A	Tantalum 2.2 μ F	35V	\pm 20 %
C27, 28	C1HCSK470SL	Ceramic 47pF	50V	\pm 10 %
C29, 30	C1HRE-475AL	Electrolytic 4.7 μ F	50V	
C31, 32	C1HYSK681R	Ceramic 680pF	50V	\pm 10 %
C33, 34	C1HFAJ154A	Mylar 0.15 μ F	50V	\pm 5 %
C35	C1HRB-227A	Electrolytic 220 μ F	50V	

SEMICONDUCTORS		
Q01, 02	2035 5151 57079	TR 2SC1570LG
03, 04		
05, 06		

RESISTORS				
R01, 02	R2EDSJ334A	Carbon 330k	1/4W	\pm 5 %
R03, 04	R2EDSJ102A	Carbon 1k	1/4W	\pm 5 %
R05, 06	R2EDSJ224A	Carbon 220k	1/4W	\pm 5 %
R07, 08	R2EDSJ334A	Carbon 330k	1/4W	\pm 5 %
R09, 10	R2EDSJ103A	Carbon 10k	1/4W	\pm 5 %
R11, 12	R2EDSJ334A	Carbon 330k	1/4W	\pm 5 %
R13, 14	R2EDSJ332A	Carbon 3.3k	1/4W	\pm 5 %
15, 16				
R17, 18	R2EDSJ102A	Carbon 1k	1/4W	\pm 5 %
R19, 20	R2EDSJ224A	Carbon 220k	1/4W	\pm 5 %
R21, 22	R2EDSJ334A	Carbon 330k	1/4W	\pm 5 %
R23, 24	R2EDSJ472A	Carbon 4.7k	1/4W	\pm 5 %
R25, 26	R2EDSJ104A	Carbon 100k	1/4W	\pm 5 %
R27, 28	R2EDSJ123A	Carbon 12k	1/4W	\pm 5 %
R29, 30	R2EDSJ822A	Carbon 8.2k	1/4W	\pm 5 %
R31, 32	R2EDSJ103A	Carbon 10k	1/4W	\pm 5 %
33, 34				
R35, 36	R2EDSJ223A	Carbon 22k	1/4W	\pm 5 %
R37, 38	R2EDSJ564A	Carbon 560k	1/4W	\pm 5 %
R39, 40	R2EDSJ472A	Carbon 4.7k	1/4W	\pm 5 %
R41, 42	R2EDSJ821A	Carbon 820	1/4W	\pm 5 %
R43, 44	R2EDSJ272A	Carbon 2.7k	1/4W	\pm 5 %
R45	R2EDSJ101A	Carbon 100	1/4W	\pm 5 %

PARTS LIST

POWER AMP PCB Assy
1310 4001 79306

Ref. No.	Part Number	Description
	HLL-PTH487A-B	Posistor

CAPACITORS				
C01, 02	C1HCSK471SL	Ceramic 470pF	50V	\pm 10 %
C03, 04	C1HRE-105AL	Electrolytic 1 μ F	50V	
C05, 06	C1ARB-336A	Electrolytic 33 μ F	10V	
C07, 08	C1HCDJ120SL	Ceramic 12pF	50V	
C09, 10	C1HRB-476A	Electrolytic 47 μ F	50V	
11, 12				
C15, 16	C1HFAM223A	Mylar 0.022 μ F	50V	\pm 20 %
17, 18				
C19	C0JRB-227A	Electrolytic 220 μ F	6.3V	
C20	C1HRB-105A	Electrolytic 1 μ F	50V	
C21, 22	C1HRB-106A	Electrolytic 10 μ F	50V	
23, 24				

SEMICONDUCTORS		
D01, 02	2055 9040 44210	Diode DS-442
03, 04		
09, 10		
11, 12		
13, 14		
15, 16		
17		
D18	DNN-RD6.2E	Diode RD-6.2E
IC01, 02	2065 6380 08210	IC STK-082
Q01, 02	2035 6701 17550	TR 2SC1175E
Q03, 04	2035 6800 65950	TR 2SA659E
Q05	2035 6701 17550	TR 2SC1175E
Q06, 07	2035 5100 53650	TR 2SC536E

RESISTORS				
R01, 02	R2EDSJ272A	Carbon 2.7k	1/4W	\pm 5 %
R03, 04	R2EDSJ563A	Carbon 56k	1/4W	\pm 5 %
R05, 06	R2EDSJ222A	Carbon 2.2k	1/4W	\pm 5 %
R07, 08	R2EDSJ563A	Carbon 56k	1/4W	\pm 5 %
R09, 10	R2HXB101A	Oxide Metal Film 100 1/2W	\pm 5%	
11, 12				
R13, 14	R3HEIKR33A	Cement 0.33	5 W	\pm 10 %
R17, 18	R3DXBJ331A	Oxide Metal Film 330 2W	\pm 5 %	
R27, 28	R2EDSJ102A	Carbon 1k	1/4W	\pm 5 %
R29	R2EDSJ222A	Carbon 2.2k	1/4W	\pm 5 %
R30	R2EDSJ682A	Carbon 6.8k	1/4W	\pm 5 %
R31	R2EDSJ102A	Carbon 1k	1/4W	\pm 5 %
R32	R2EDSJ223A	Carbon 22k	1/4W	\pm 5 %
R33	R2EDSJ333A	Carbon 33k	1/4W	\pm 5 %
R34, 35	R2EDSJ224A	Carbon 220k	1/4W	\pm 5 %

DIAL LAMP PCB Assy
1310 4001 72166

Ref. No.	Part Number	Description
	4 2359 20930	Lamp Holder
	4 6129 20280	Pilot Lamp, Fuse Type 6.3V 250mA

POWER SUPPLY PCB Assy
1310 4001 93200

Ref. No.	Part Number	Description
CAPACITORS		
C02	C2HYDP103A	Ceramic 0.01 μ F 500V +100,—0 %
C06, 07	C1HRT-337A	Electrolytic 330 μ F 50V
C08	C1HRB-107A	Electrolytic 100 μ F 50V
C09	C1HRB-227A	Electrolytic 220 μ F 50V
C10	C1ERB-227A	Electrolytic 220 μ F 25V
C11, 12	4 2239 21220	Mylar 0.22 μ F 250V \pm 10%
13, 14		

SEMICONDUCTORS		
D01	DDD-S4VB20A	Diode S4VB20
D05	DGG-1N4002	Diode 1N4002
D06	DJJ-WZ-130	Diode WZ-130
Q01	2035 8220 33050	TR 2SD330E

RESISTORS				
R01	R2EDSJ332A	Carbon 3.3k	1/4W	\pm 5 %
R02	R3WXB1391A	Oxide Metal Film 390 3W	\pm 5 %	
R03	R3DXBJ821A	Oxide Metal Film 820 2W	\pm 5 %	
R04	R3AXBJ391A	Oxide Metal Film 390 1W	\pm 5 %	
R05	R3AXBJ221A	Oxide Metal Film 220 1W	\pm 5 %	
R06	R2EDSJ681A	Carbon 680	1/4W	\pm 5 %
R07	R2EDSJ683A	Carbon 68k	1/4W	\pm 5 %
R08	R2EDSJ152A	Carbon 1.5k	1/4W	\pm 5%


LW/MW CONV. PCB Assy 1310 4001 75303		
RE01, 02	4 2329 20210	Leed Relay
TC01, 03	4 2249 20310	Variable Capacitor
TC02, 04	4 2249 20440	Variable Capacitor
	4 2589 20851	MW OSC Coil
	4 2589 20860	LW OSC Coil

CAPACITORS				
C01, 02	C1HYSE473A	Ceramic 0.047 μ F	50V +80,—20%	
03				
C04	C1HSEJ341A	Styrol Con. 340pF	50V	\pm 5%
C05	C1HSEJ151A	Styrol Con. 150pF	50V	\pm 5%
C06	C1HYSE473A	Ceramic 0.047 μ F	50V +80,—20%	
C08	C1HCDJ150SL	Ceramic 15pF	50V	\pm 5%
C10	C1HCDJ560SL	Ceramic 56P	50V	\pm 5%

SEMICONDUCTORS		
Q01, 02	2035 6500 04160	FET 2SK 41F


RESISTORS				
R01	R2EDSJ103A	Carbon 10k	1/4W	\pm 5%
R02, 07	R2EDSJ155A	Carbon 1.5M	1/4W	\pm 5%
R03, 08	R2EDSJ824A	Carbon 820k	1/4W	\pm 5%
R04, 09	R2EDSJ472A	Carbon 4.7k	1/4W	\pm 5%
R05	R2EDSJ152A	Carbon 1.5k	1/4W	\pm 5%
R06, 10	R2EDSJ102A	Carbon 1k	1/4W	\pm 5%
11				

POINT TO POINT WIRING DIAGRAM

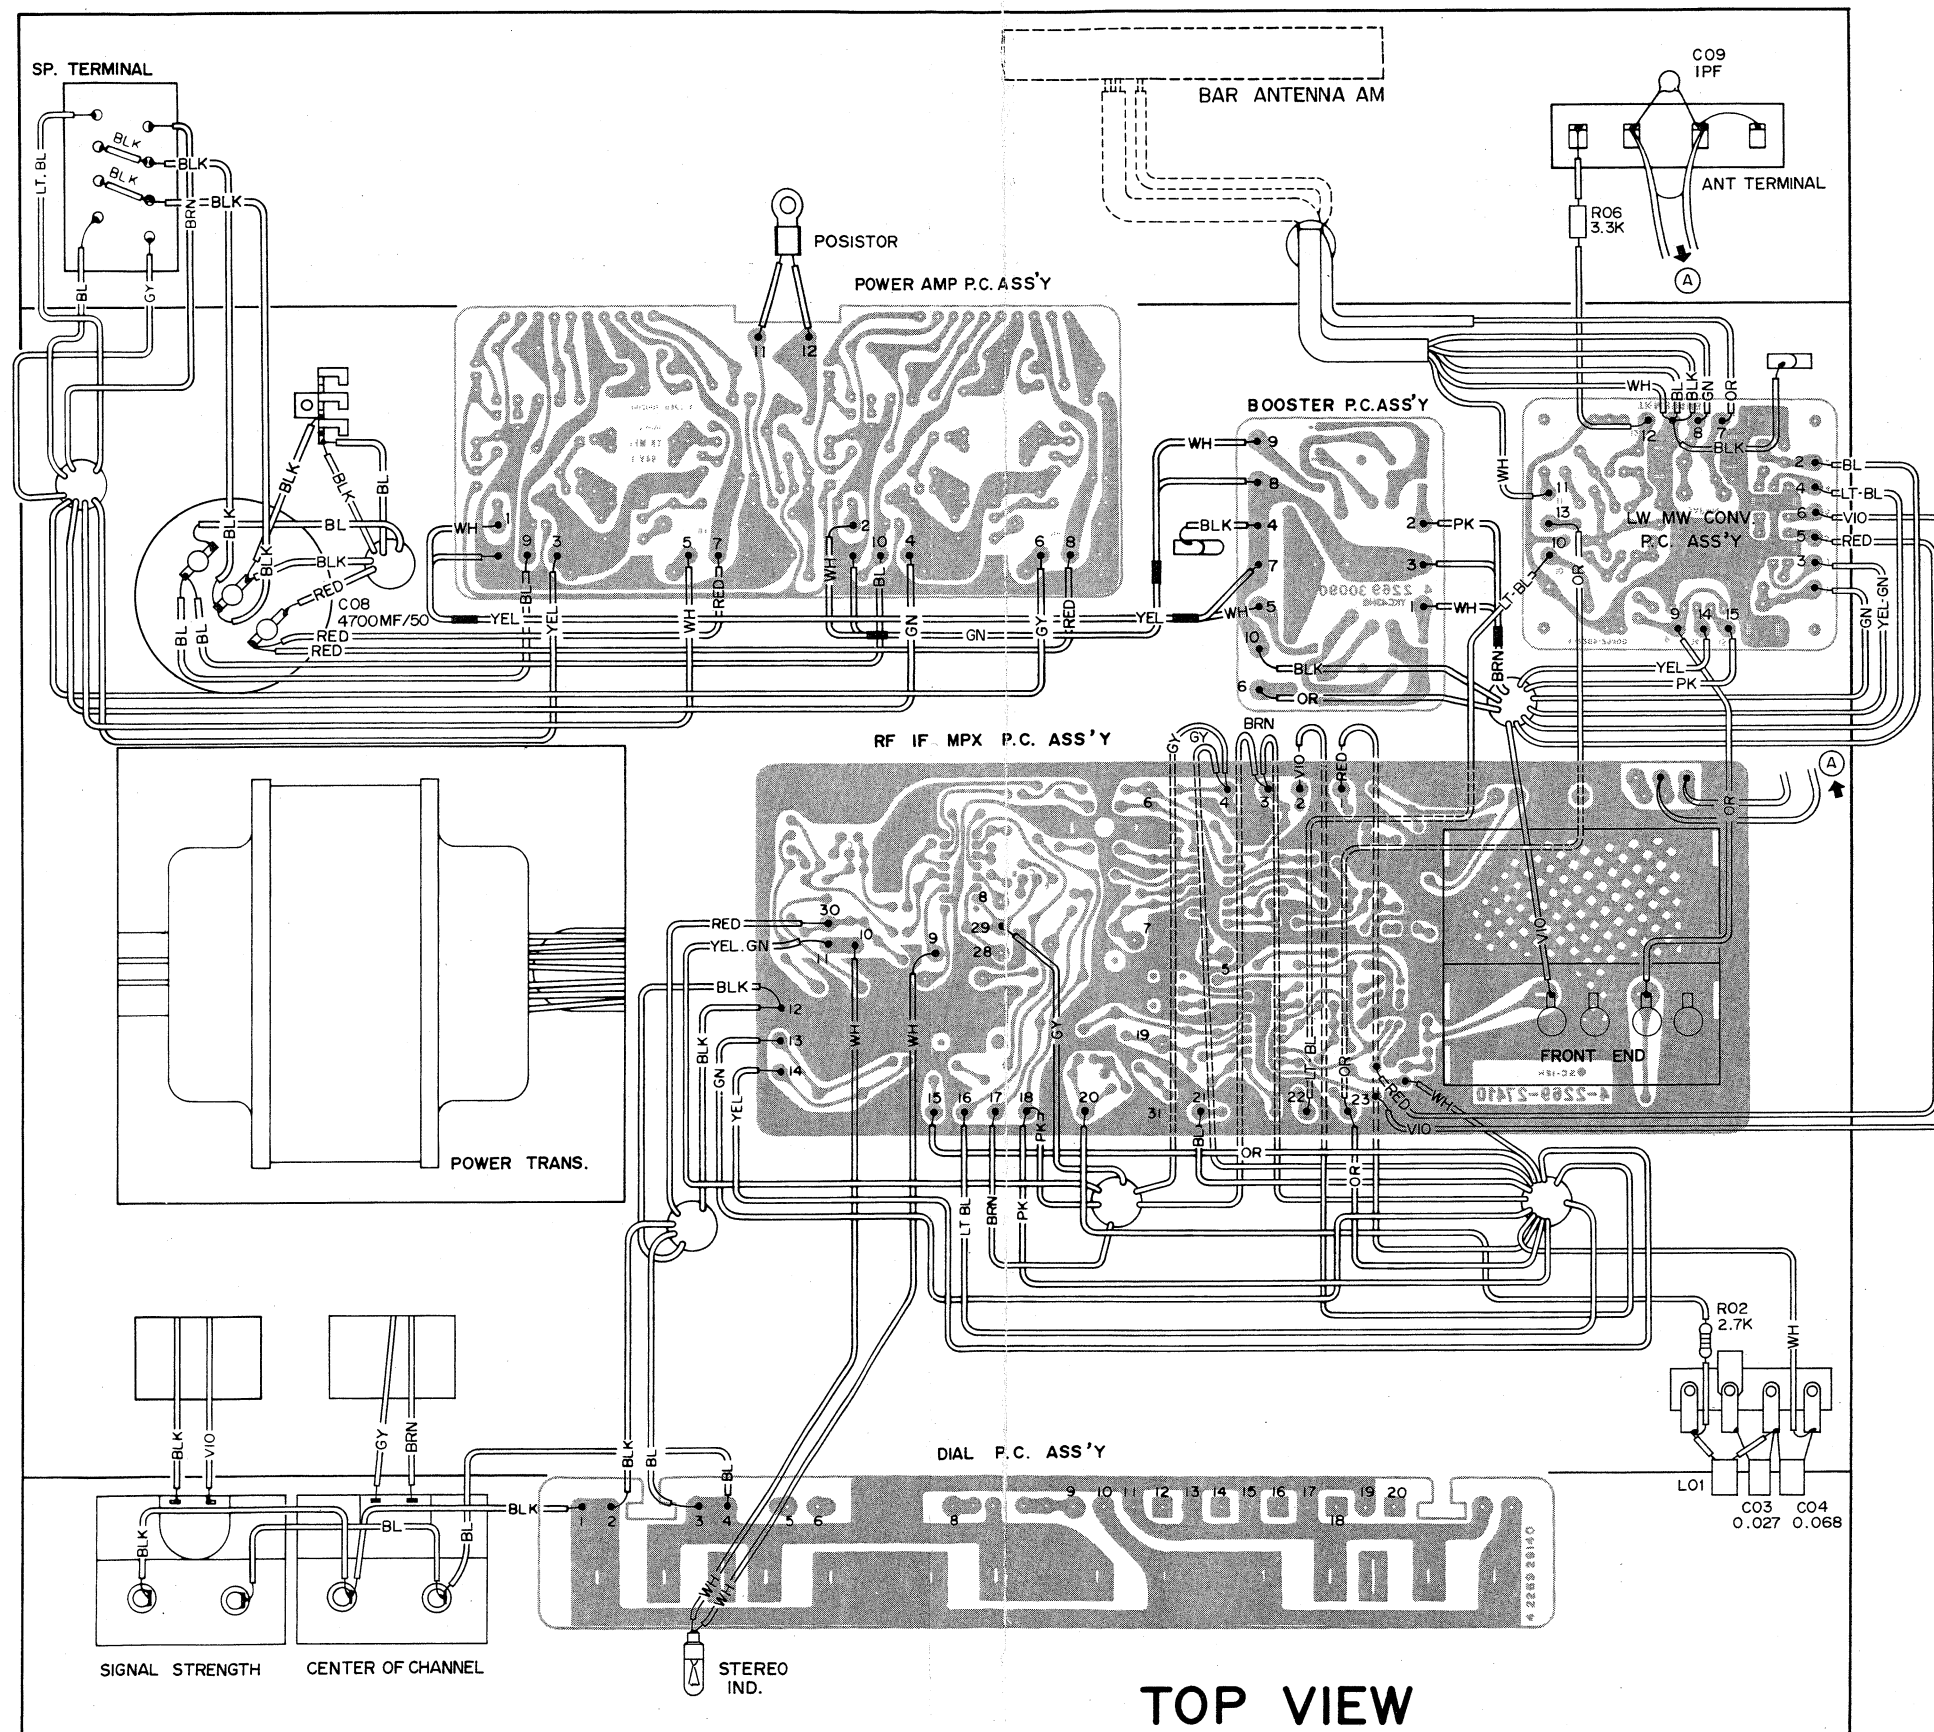

TOP VIEW

POINT TO POINT WIRING DIAGRAM

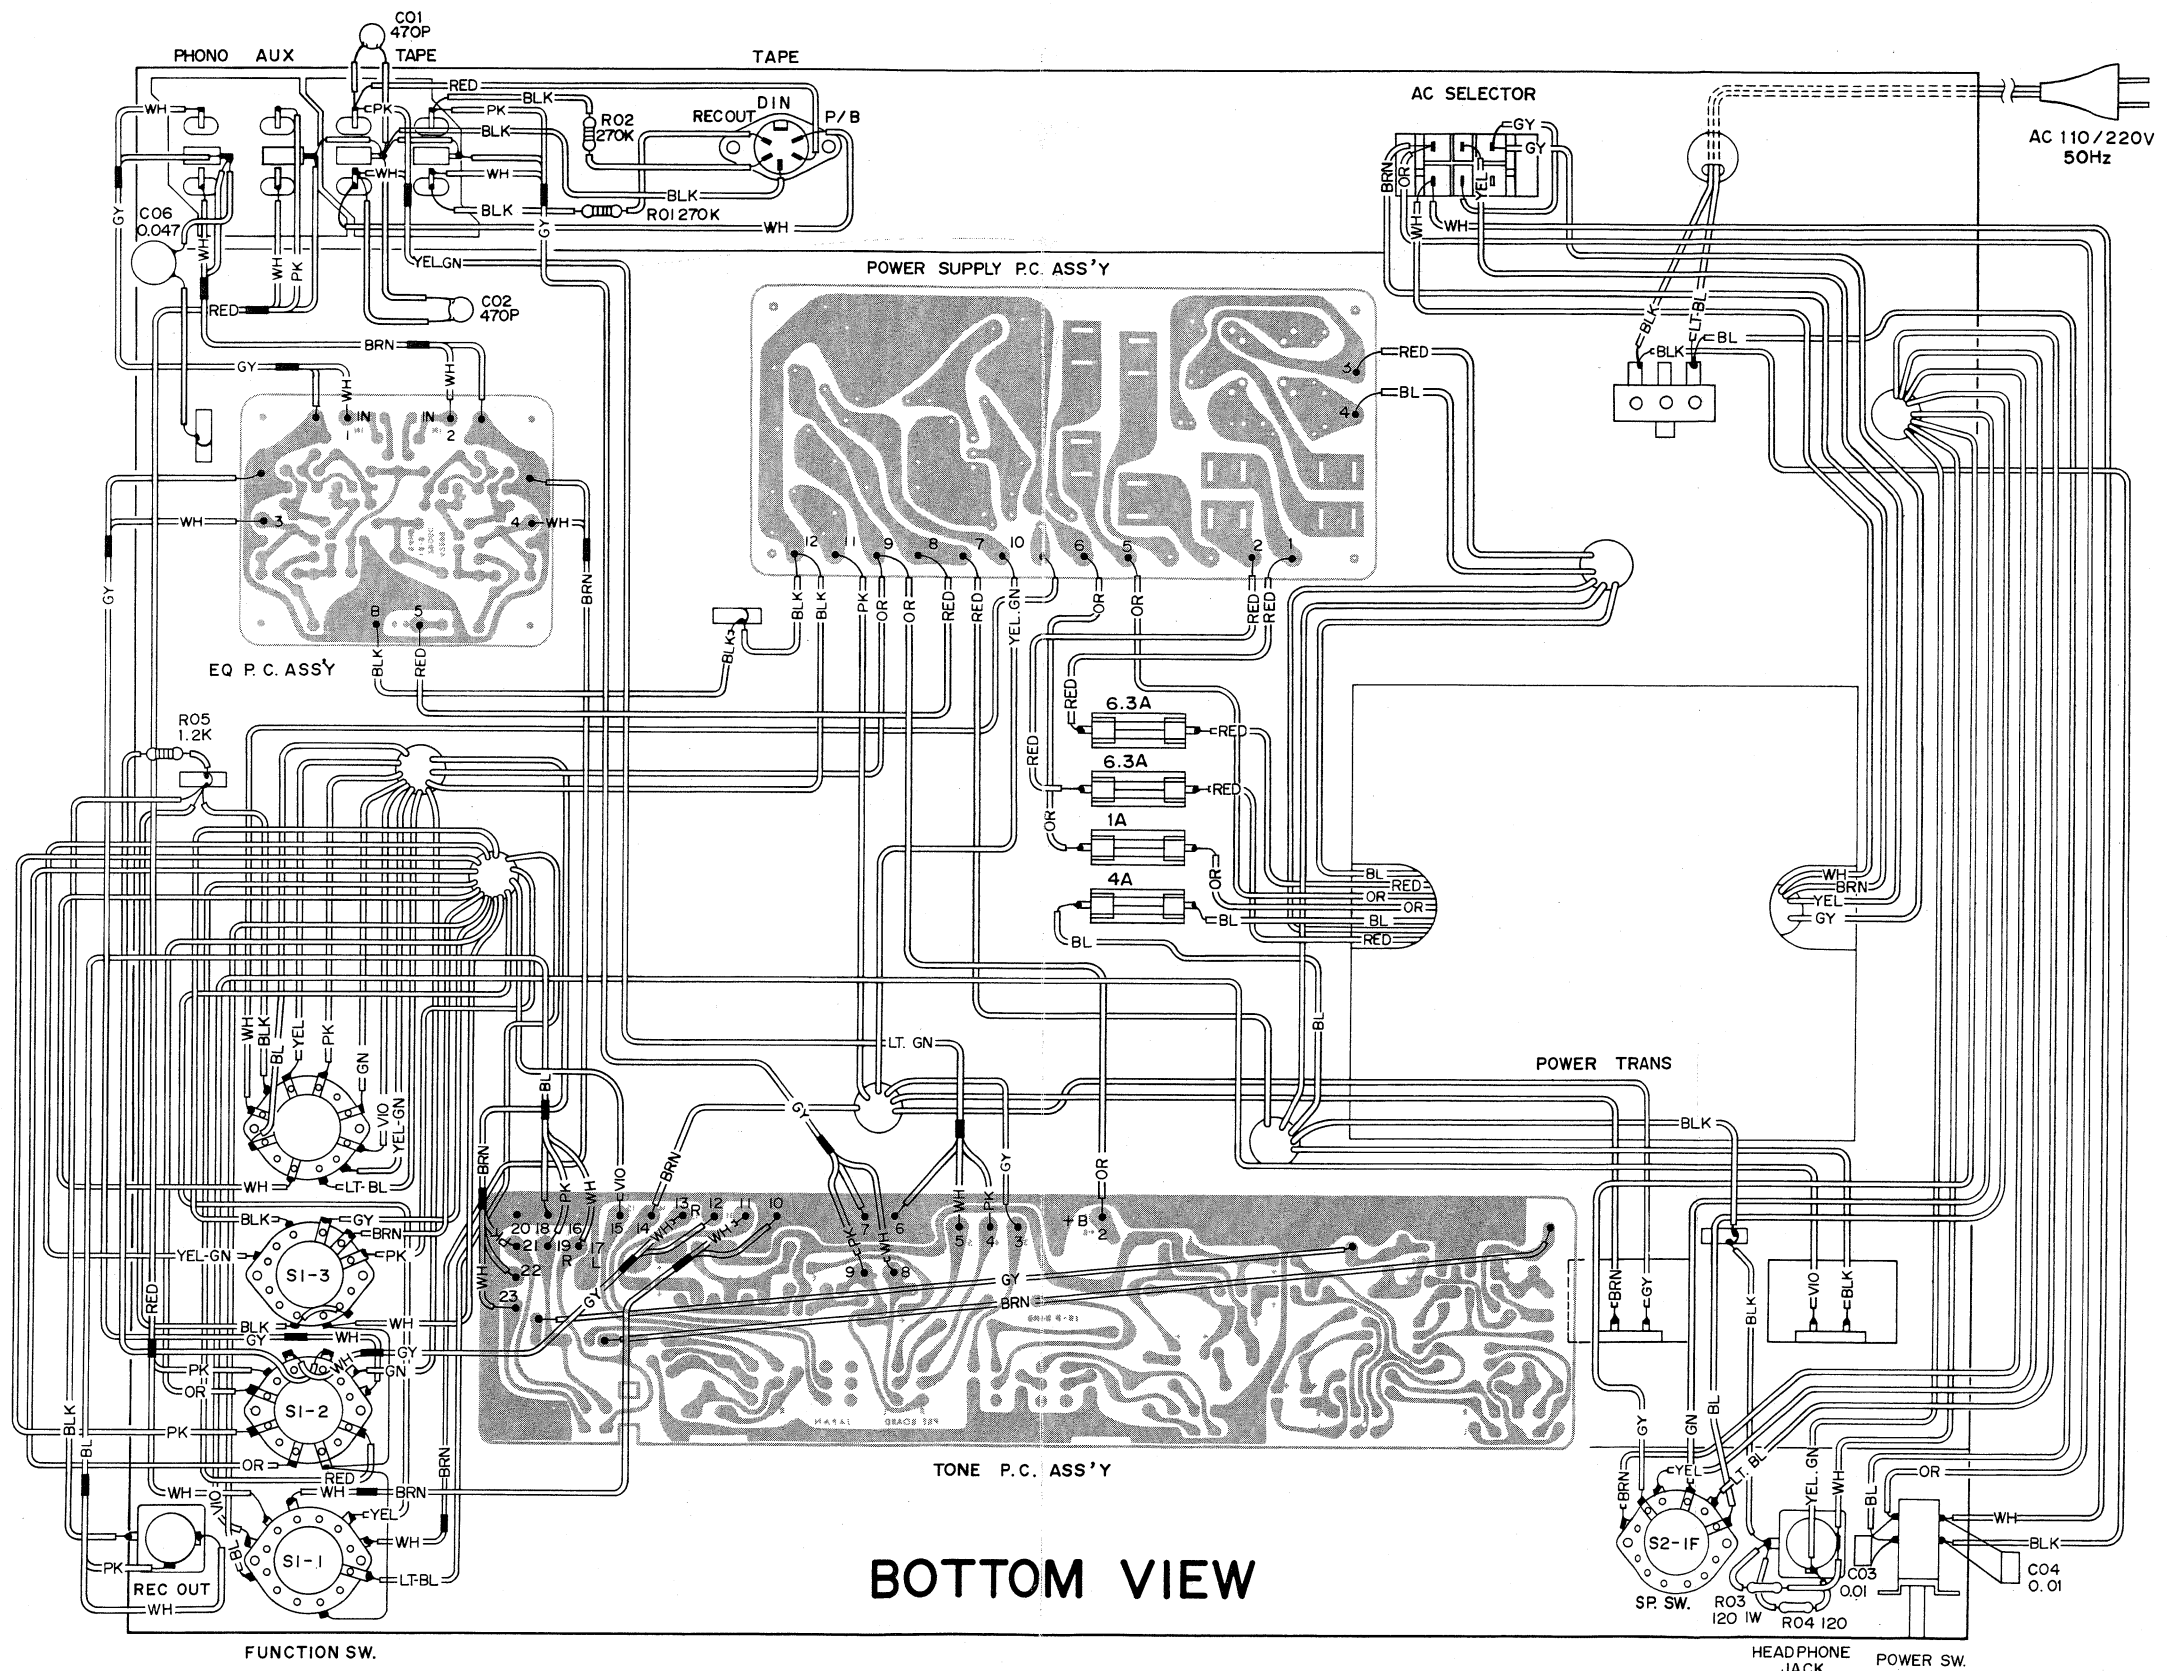

75Ω
300Ω
AM

4-1259-20370

VC1 TC4
VC2 TC4
VC3 TC5
VC4 TC4
VC5 TC5

RF IF MPX P.C. ASS'Y
1310-4001-93100

CONVERTER P.C. ASS'Y
1310-4001-75303

Q01, Q02 2SK41

BAR ANT.

EQ P.C. ASS'Y
1310-4001-72120

Q01, Q02 2SA763E
Q03, Q04 2SC1570 L,H

TONE P.C. ASS'Y
1310-4001-72133

Q01 ~ Q06 2SC1570 L,H

BOOSTER P.C. ASS'Y
1310-4001-79500

Q01, Q02 2SC1570

POWER SUPPLY P.C. ASS'Y
1310-4001-93200

Q01 2SD330 E
S4VB20
Q05 IN4002

POWER TRANS.

AC 110/220V

POWER AMP. P.C. ASS'Y
1310-4001-79306

Q01, Q02, Q05 2SC1175
Q06, Q07 2SC536
D18 6.2E

Q03, Q04 2SA659
D01 ~ D10 DS442
D11 ~ D17

S1: FUNCTION SW.
PHONO FM MW LW AUX

S2: SPEAKER SW.

S3: POWER SW.

S4: LOUDNESS

S5: TAPE MONITOR

S6: MONO MODE

S7: HIGH FILTER

S8: FM MUTING

S9: VOLTAGE SELECTOR 110/220V

REC OUT

PHONO
AUX
TAPE IN
TAPE OUT
REC OUT
P/B
DIN

SPEAKER TERMINAL
L R
A B
S2-1-F
S2-1-B

DIAL LAMP P.C. ASS'Y
1310-4001-72166

S. METER
T. METER
S. METER LAMP
T. METER LAMP
6.3V 250mA

STEREO IND.
6V 30mA

FM OUT